WF8804JS(A/F/G/H/S/V/W/Z)
WF8802JS(A/F/G/H/S/V/W/Z)
WF8800JS(A/F/G/H/S/V/W/Z)
WF8704JS(A/F/G/H/S/V/W/Z)
WF8702JS(A/F/G/H/S/V/W/Z)
WF8700JS(A/F/G/H/S/V/W/Z)
WF8804ES(A/F/G/H/S/V/W/Z)
WF8802ES(A/F/G/H/S/V/W/Z)
WF8800ES(A/F/G/H/S/V/W/Z)
WF8704ES(A/F/G/H/S/V/W/Z)
WF8702ES(A/F/G/H/S/V/W/Z)
WF8700ES(A/F/G/H/S/V/W/Z)
WF8804RS(A/F/G/H/S/V/W/Z)
WF8802RS(A/F/G/H/S/V/W/Z)
WF8800RS(A/F/G/H/S/V/W/Z)
WF8704RS(A/F/G/H/S/V/W/Z)
WF8702RS(A/F/G/H/S/V/W/Z)
WF8700RS(A/F/G/H/S/V/W/Z)

Washing Machine

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register
your product at

www.samsung.com/global/register

SAMSUNG

WF8800RS-02591S_EN.indd 1 2008-09-18 ¿ÀÈÄ 3:31:18

features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its super-size capacity to its energy efficiency, the Samsung washing machine has all the features to turn a mundane chore into a pleasure.

- **Baby Care System**

  Your Samsung washing machine includes wash programs that adds protection to the clothing of children with sensitive skin.
  These programs reduce skin irritation in children by minimizing detergent residue. In addition, these programs classify laundry into various types and the wash is performed according to the laundry characteristics so that children feel refreshingly clean whenever they put on their clothes.

- **Child Lock**

  The Child Lock function ensures that curious little hands are kept out of your washing machine.
  This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

- **Wool Certified**

  The machine has been tested and passed the required Woolmark Company specification for machine washable wool products.
  Fabrics should be washed according to the instructions on the garment label as specified by Woolmark and Samsung.

- **Delay start**

  Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

- **Quick Wash**

  No time to lose! Less than 30 minutes wash will give you time to run out before it's too late. Our 29 minute Quick Wash program can be the solution to your busy life. Now you can wash your favourite clothes in only 29 minutes!

- **Delicates & Hand Wash Program**

  Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

- **Ceramic Heater for Durability & Energy Saving (selected models)**

  Our truly innovative Ceramic Heater is twice as durable as regular heaters.
  That saves you money on repairs. Plus, it eliminates the scale of hard water and save energy.

WF8800RS-02591S_EN.indd 2 2008-09-18 ¿ÀÈÄ 3:31:18

- **Energy Saving A+AA**

  We've made the grade! Samsung's WF8804(ES/RS/JS)/WF8704(ES/RS/JS), the latest in our hightech 1400 rpm spin models, was awarded a triple A score: A+ rated energy consumption, A rated washing performance, and A rated spin dry performance. As a result, you accumulate more free time and money to spend on what really counts - you and your family.

- **Air Wash (selected models)**

  Refresh your favorite clothes simply with air after you've been out at a party or have simply been out (food, cigarettes). Non-stained clothing does not need to be washed, simply refresh it. 3 different cycles are available for various kinds of fabrics.

- **Wide door**

  Extra wide door aperture for convenient viewing! Easily add and remove laundry, especially for large sized laundry items such as bedding, towels etc.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The "Troubleshooting and information codes" section on page 29 tells you what to do if something goes wrong with your new washing machine.

WF8800RS-02591S_EN.indd 3 2008-09-18 ¿ÀÈÄ 3:31:18

safety information

Throughout this manual, you'll see Warning ⚠ and Caution ⚠ notes. These warnings, cautions, and the important safety instructions that follow do not cover all possible conditions and situations that may occur. It's your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washing machine. Samsung is not liable for damages resulting from improper use.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

⚠ **WARNING**	Hazards or unsafe practices that may result in **severe personal injury or death**.
⚠ **CAUTION**	Hazards or unsafe practices that may result in **minor personal injury or property damage**.
⚠ **CAUTION**	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washing machine, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.
	Notic

These warning signs are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

Install and store your washing machine inside, away from exposure to weather.

Install and level your washing machine on a floor that can support its weight.

Your washing machine must be properly grounded. Never plug it into an ungrounded outlet.

WF8800RS-02591S_EN.indd 4 2008-09-18 ¿ÀÈÄ 3:31:18

To reduce the risk of fire or explosion:

- Do not wash items that have been washed, soaked, or treated with gasoline, dry cleaning solvents, or other flammable or explosive substances. They give off vapors that could ignite or explode. Rinse by hand any material that has been exposed to cleaning solvent or other flammable liquids or solids before putting in your washing machine. Be sure that all traces of such liquids, solids, and fumes have been removed. Dangerous substances include acetone, denatured alcohol, gasoline, kerosene, certain liquid household cleaners and spot removers, turpentine, waxes, and wax removers.
- Do not put gasoline, dry cleaning solvents, or other flammable or explosive substances into the washing machine.
- Under certain conditions, hydrogen gas may be produced in a hot water system–such as your hot water heater -- that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If your hot water system has not been used for two weeks or more, turn on all hot water taps in your home, and let the water flow for several minutes before using your washing machine. This will release any hydrogen gas build–up. Since hydrogen gas is flammable, do not smoke or light an open flame during this time.

Ventilate immediately without touching the power plug if there is a gas leak.

Unplug the power cord before servicing your washing machine.

Before each wash, empty the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal metal.

Do not open the door of the washing machine if you can still see water. Check that the water has drained before opening the door.

Do not repair, replace, or service any part of your washing machine yourself unless you fully understand the recommended user–repair instructions and have the skills to carry them out. Work done by an unauthorized person may void your warranty.

Connect the washing machine to the water mains using the new set of hoses. Do not reuse the old set of hoses.

Water inlet hoses deteriorate over time. Check the hoses periodically for bulges, kinks, cuts, wear, and leaks, and replace them as needed and at least every five years.

All packaging and shipping bolts must be removed before the appliance is used. Serious damage may occur if they are not removed. See page 12 “Removing the shipping bolts”.

Before washing clothes for the first time, you must run a complete cycle without clothes. See “Washing for the first time”.

WF8800RS-02591S_EN.indd 5 2008-09-18 ¿ÀÈÄ 3:31:18

safety information

The appliance is designed for home use only.

WARNING Make sure that water and electrical connections are made by qualified technicians, observing the user manual (see “Installing your washing machine”) and local safety regulations.

Before cleaning or carrying out maintenance, unplug the appliance from the electrical outlet.

Always unplug the appliance and turn off the water after use.

Make sure that the pockets of all clothing to be washed are empty.

Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Never allow pets and children to play on or in the appliance. It may cause injury or suffocate them.

The glass door becomes very hot during the washing cycle. Never touch on the glass door while it is in use.

Do not attempt to repair the appliance yourself. Repairs made by inexperienced or unqualified persons may cause injury and/or make more serious repairs to the appliance necessary.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance should only be serviced by our authorized service center, and only rated spare parts should be used.

WARNING Do not let children (or pets) play on or in your washing machine. The washing machine door does not open easily from the inside, and children may be seriously injured if trapped inside.

This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.

Young children should be supervised to ensure that they do not play with the appliance.

To use this appliance safely, the user should become familiar with the instructions for operation of the appliance and always take extra care when using it.

This appliance should be positioned to be accessible to the power plug, the water supply tabs and the drain pipes.

WARNING Packing materials can be dangerous to children; keep all packing material (plastic bags, polystyrene, etc.) well out of the reach of children.

Do not use processed water containing oil, cream or lotion, which is usually found in skincare shops or massage clinics.

- Otherwise this will cause the packing to be deformed, which causes a malfunction or water leak.

WF8800RS-02591S_EN.indd 6 2008-09-18 ¿ÀÈÄ 3:31:18

A stainless washing tub does not usually rust. However if some metal such as a hair pin is left in the tub for an extended time, the tub could rust.

- Do not leave water or bleach containing chlorine in the tub for an extended period of time.
- Do not regularly use or leave water containing iron in the tub for an extended period of time. If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge or soft cloth to clean it. (Under no circumstances use a metal brush)

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Use the new hose-sets and old hose-sets should not be reused.

WF8800RS-02591S_EN.indd 7 2008-09-18 ¿ÀÈÄ 3:31:19

contents

SETTING UP YOUR WASHING MACHINE 9

9 Checking the parts
10 Meeting installation requirements
10 Electrical supply and grounding
10 Water Supply
11 Drain
11 Flooring
11 Surrounding temperature
11 Alcove or closet installation
11 Installing your washing machine

WASHING A LOAD OF LAUNDRY 17

17 Washing for the first time
17 Basic instructions
18 Using the control panel
20 Child lock
20 Sound off
20 Delay start
21 Air Wash
22 Washing clothes using the cycle selector
23 Washing clothes manually
24 Laundry guidelines
25 Detergent and additives information
25 Which detergent to use
25 Detergent drawer

CLEANING AND MAINTAINING YOUR WASHING MACHINE 26

26 Draining the washing machine in an emergency
26 Cleaning the exterior
27 Cleaning the detergent drawer and drawer recess
27 Cleaning the debris filter
28 Cleaning the water hose mesh filter
28 Repairing a frozen washing machine
28 Storing your washing machine

TROUBLESHOOTING AND INFORMATION CODES 29

29 Check these points if your washing machine...
30 Information codes

CYCLE CHART 31

31 Cycle chart

APPENDIX 32

32 Fabric care chart
32 Protecting the environment
32 Declaration of conformity
33 Specifications

WF8800RS-02591S_EN.indd 8 2008-09-18 ¿ÀÈÄ 3:31:19

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

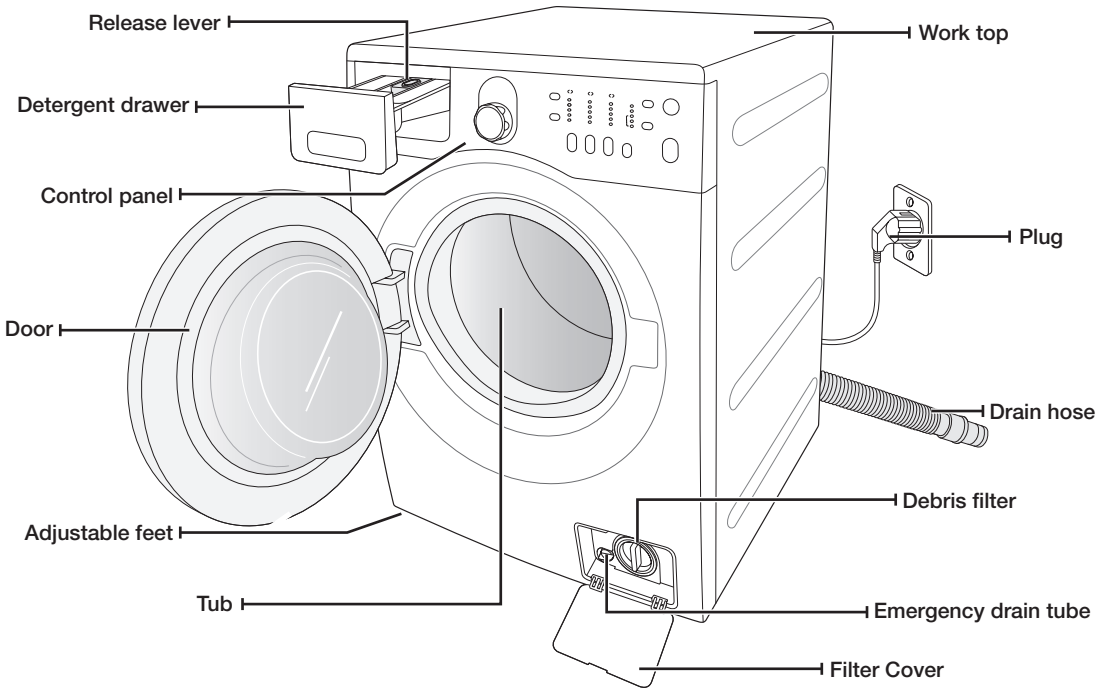

Spanner

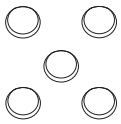

Bolt hole covers

Water supply hose



Hose guide

WF8800RS-02591S_EN.indd 9 2008-09-18 ¿ÀÈÄ 3:31:19

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding

To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/FNPA, No. 70 Latest Revision and local codes and ordinances. It is the personal responsibility of the appliance owner to provide adequate electrical service for this appliance.

WARNING Never use an extension cord.
Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:

- 220V~240V 50Hz 15 AMP fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.
Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result electrical shock.
Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/ flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 4 feet (122cm) of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.

Most plumbing supply stores sell inlet hoses of various lengths up to 10 feet (305cm) long.

You can reduce the risk of leaks and water damage by:

- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.

WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

WF8800RS-02591S_EN.indd 10 2008-09-18 ¿ÀÈÄ 3:31:19

Drain

Samsung recommends a standpipe height of 18 in (46 cm). The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm	Rear – 51 mm
Top – 25 mm	Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1
Selecting a location

Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 32 ˚F or 0 ˚C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord

WF8800RS-02591S_EN.indd 11 2008-09-18 ¿ÀÈÄ 3:31:19

setting up your washing machine

STEP 2

Removing the shipping bolts

Before installing the washing machine, you must remove the five shipping bolts from the back of the unit.

1. Loosen all the bolts with the supplied wrench.

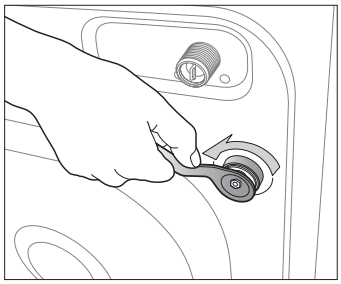

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

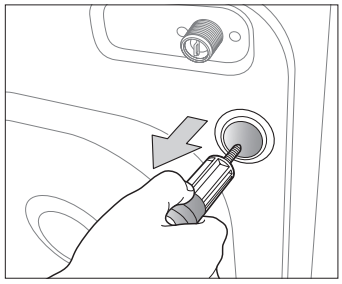

3. Fill the holes with the supplied plastic covers.

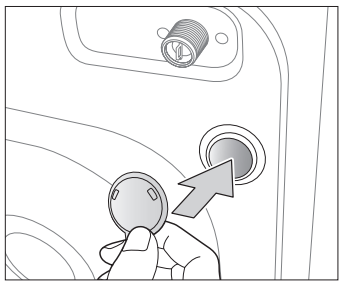

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.

WF8800RS-02591S_EN.indd 12 2008-09-18 ¿ÀÈÄ 3:31:20

STEP 3
Adjusting the levelling feet

When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.
2. Level your washing machine by turning the leveling feet in and out as necessary by hand.

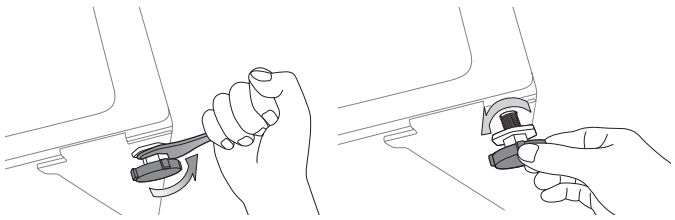

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

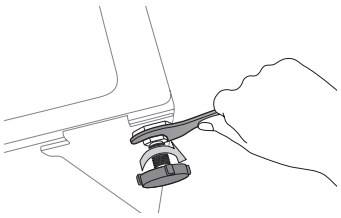

STEP 4
Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

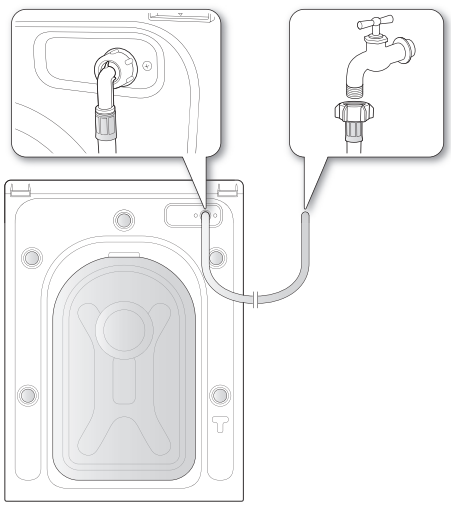

For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.

WF8800RS-02591S_EN.indd 13 2008-09-18 ¿ÀÈÄ 3:31:20

setting up your washing machine

Connecting the water supply hose (selected models)

1. Remove the adaptor from the water supply hose.

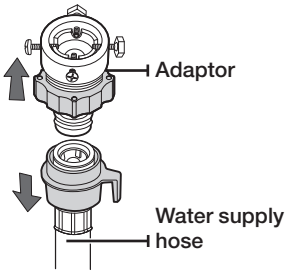

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.

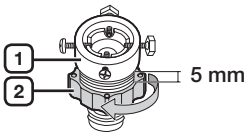

3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards. Turn part (2) following the arrow and connect (1) and (2).

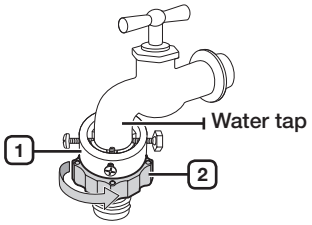

4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

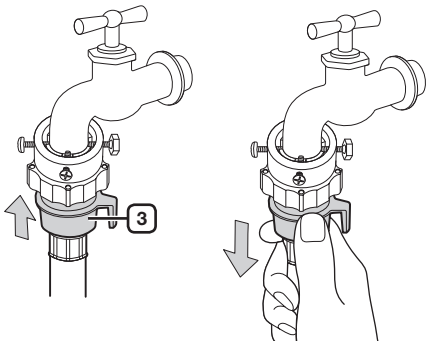

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

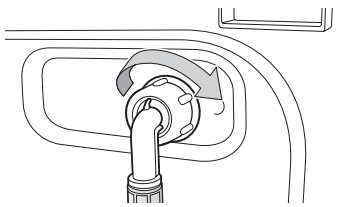

WF8800RS-02591S_EN.indd 14 2008-09-18 ¿ÀÈÄ 3:31:20

6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.

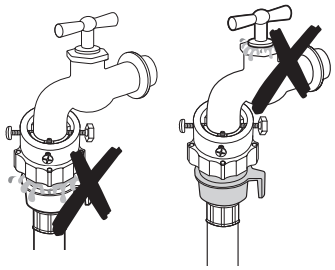

WARNING Do not use your washing machine if there is a water leak. This may cause electric shock or injury.

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

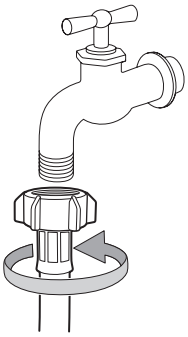

Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

WF8800RS-02591S_EN.indd 15 2008-09-18 ¿ÀÈÄ 3:31:21

setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

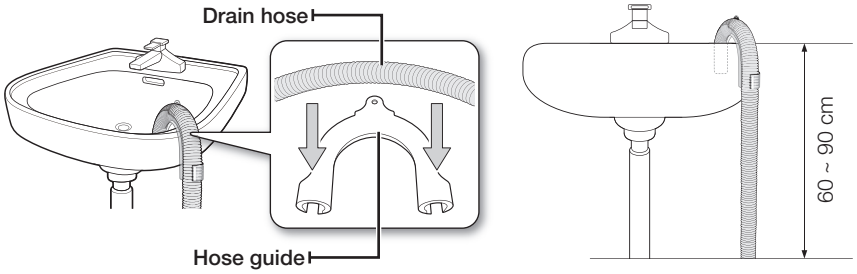

2. In a sink drain pipe branch: The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
3. In a drain pipe: We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

STEP 5

Powering your washing machine

Plug the power cord into a wall sockets, a 230 volt 50 Hz approved electrical outlet protected by a 15-amp fuse or comparable circuit breaker. (For more information on electrical and grounding requirements, see page 10.)

WF8800RS-02591S_EN.indd 16 2008-09-18 ¿ÀÈÄ 3:31:21

washing a load of laundry

With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment Ⅱ in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

This will remove any water that might be left over in the machine from the manufacturer's test run.

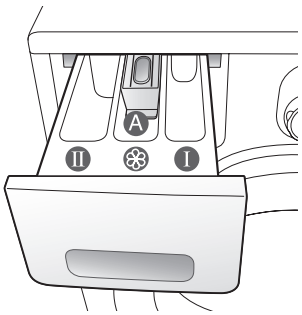

Compartment Ⅰ: Detergent for prewash, or starch.
Compartment Ⅱ: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.
Compartment ❀: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A")

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

WARNING Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 24.

- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not wash water-proofed items.

2. Close the door until it latches.
3. Turn the power on.
4. Add detergent and additives to the dispenser drawer.
5. Select the appropriate cycle and options for the load.
   The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
6. Press the **Start/Pause** button.

WF8800RS-02591S_EN.indd 17 2008-09-18 ¿ÀÈÄ 3:31:22

washing a load of laundry

USING THE CONTROL PANEL

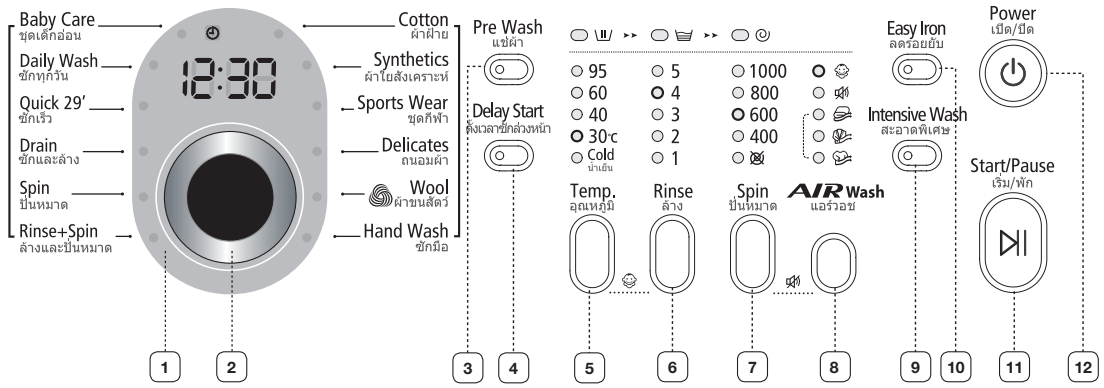

1 DIGITAL GRAPHIC DISPLAY	Displays the remaining wash cycle time, all cycle information, and error messages.
2 CYCLE SELECTOR	Select the tumble pattern and spin speed for the cycle. For detailed information, refer to "Washing clothes using the cycle selector (see page 22)". **Cotton** - For averagely or lightly soiled cotton, bed linen, table linen, underwear, towels, shirts, etc. **Synthetics** - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends. **Sports Wear** - Use for water-proofed or proofed garments to keep their good looks and fresh feel. **Delicates** - For sheer fabrics, brassieres, lingerie, dresses, shirts and blouses. For best results, use liquid detergent. **Wool** - Only for machine-washable wool. A load should be less than 2.0 kg. The wool wash cycle of this machine has been approved by Woolmark for the washing of machine-washable Woolmark products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine, M0509 (Certificate Number issued by IWS NOM INEE Co., Ltd.) **Handwash** - A very light wash cycle as gentle as a hand wash. **Baby Care** - High temperature wash and extra rinses ensure that no washing powder remains to mark your thin clothes. **Daily Wash** - Use for everyday items such as underwear and shirts. **Quick 29'** - For lightly soiled garments that you require quickly. **Drain** - Just drain the water from washing machine without spinning. **Spin** - Performs an additional spin cycle to remove more water. **Rinse + Spin** - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load.

WF8800RS-02591S_EN.indd 18 2008-09-18 ¿ÀÈÄ 3:31:22

3 **PREWASH SELECTION BUTTON**	Press this button to select pre-wash. Pre-wash is only available with: Cotton, Synthetics, Sports Wear, Baby Care, Daily Wash.
4 **DELAY START SELECTION BUTTON**	Press this button repeatedly to cycle through the available Delay start options (from 3 hours to 19 hours in one hour increments). The hour displayed indicates the time when the wash cycle will be finished.
5 **TEMPERATURE SELECTION BUTTON**	Press this button repeatedly to cycle through the available water temperature options: (Cold Water, 30 ˚C, 40 ˚C , 60 ˚C and 95 ˚C).
6 **RINSE SELECTION BUTTON**	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.
7 **SPIN SELECTION BUTTON**	Press the button repeatedly to cycle through the available speeds for the spin cycle. WF8804 / WF8704 — , , 400, 800, 1200, 1400 rpm WF8802 / WF8702 — , , 400, 800, 1000, 1200 rpm WF8800 / WF8700 — , , 400, 600, 800, 1000 rpm "No spin " - The laundry remains in the drum and no spin cycle is performed after the final drain. "Rinse Hold " -The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.
8 **AIR WASH SELECTION BUTTON**	Press this button to refresh your clothing and stuff from everyday life. The Air Wash cycle can refresh them without water and makes them ready to wear again. "Knitwear " - Refresh knitwear such as knitted sweaters and pullovers as well as shirts and blouses that can be refreshed in 30 mins. "Suit " - Refresh business suits and clothes. This also applies to casual jackets and light overcoats. "Bedding " - Refresh and make fluffier bedding such as light blankets, bed linen and pillows.
9 **INTENSIVE WASH SELECTION BUTTON**	Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time is increased for each cycle.
10 **EASY IRON SELECTION BUTTON**	Press this button to prepare your laundry so that it can be easily ironed by reducing the wrinkles during the spin cycle. • Easy Iron is only available for the following wash programs: Cotton, Synthetics, Sports wear, Baby care, Daily wash. • When Easy Iron is selected, you can set the spin cycle speed up to 800 rpm. (If you select Easy Iron with a spin cycle speed set to higher than 800 rpm, the spinning speed is automatically changed to 800 rpm.)
11 **START/PAUSE SELECTION BUTTON**	Press to pause and restart a cycle.
12 **POWER BUTTON**	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

WF8800RS-02591S_EN.indd 19 2008-09-18 ¿ÀÈÄ 3:31:23

washing a load of laundry

Child lock

The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp.** and **Rinse** buttons at the same time for 3 seconds. The "Child Lock" lamp on the control panel will be lit when this feature is activated.

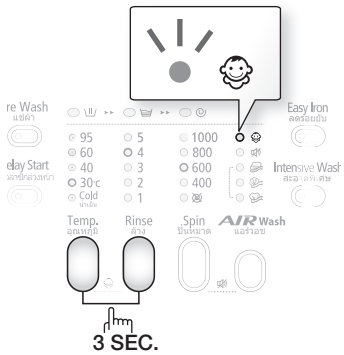

When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Spin** and **Air Wash** buttons at the same time for 3 seconds. The "Sound Off" lamp on the control panel will be lit when this feature is activated.

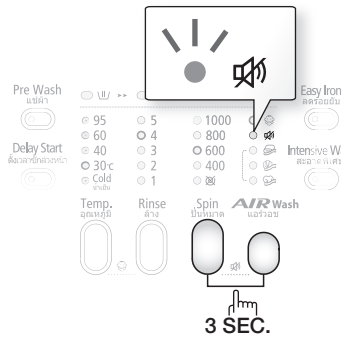

Delay start

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay start** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The "Delay start" indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay start function, press the **Power** button and then turn the washing machine on again.

WF8800RS-02591S_EN.indd 20 2008-09-18 ¿ÀÈÄ 3:31:24

Air Wash

Air Wash can refresh laundry without using water owing to its powerful airing system. Clothing that can be refreshed includes woolen coats, cotton or jumpers, sweaters and suits. (Two items or less (less than 1 kg)

1. Open the door, place the laundry into the washing machine and close the door.
2. Press the **Power** button.
3. Press the **Air Wash** button.
   - Each time the button is pressed, the operating mode cycles through the following sequence: Knitwear → Suit → Bedding → knitwear → ...

MODE	CYCLE TIME
Bedding	46 min
Suit	39 min
Knitwear	29 min

   - When one of these options has been selected, no other button can be selected and you can only select the Delay start time from between 3:00 – 19:00.
4. Close the door and press the **Start/Pause** button.

- When there is water in the tub, **Air Wash** button cannot be selected. Drain the water and select **Air Wash** button.
- Press the **Start/Pause** or **Power** button to remove the laundry.
- Fragrance or dryer sheets can be used with Air Wash programs to add fragrance to your refreshed laundry (one sheet per one or two items).

Avoid Air Wash the following clothes:

- Sensitive clothes made of leather, mink, fur, silk, etc.
- Underwear trimmed with lace, 'glued' doll cushions, and dress suits may have their decorations loosened.
- Clothes trimmed with buttons can cause them to break.
- Starchy clothes can become deformed.
- Hard bedding such as a wooden pillows (neck-rest)
  - Pillows or blankets filled with plastic or starch rather than cotton
  - Electric blankets
- Furry blankets
- Bulky blankets
- Latex pillow

WF8800RS-02591S_EN.indd 21 2008-09-18 ¿ÀÈÄ 3:31:26

washing a load of laundry

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power** button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling it.
5. Close the door.
6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.

Pre-wash is only available when selecting the Cotton, Synthetics, Sports Wear, Baby Care, and Daily Wash cycles. It is only necessary if your clothing is heavily soiled.

7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: Cotton, Synthetics, Sports Wear, Delicates, Wool, Hand Wash, Baby Care, Daily Wash, Quick 29'. The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause** button to unlock the door.

The door cannot be opened when the water is too HOT or the water level is too HIGH.

2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

WF8800RS-02591S_EN.indd 22 2008-09-18 ¿ÀÈÄ 3:31:26

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp.** button to select the temperature. (Cold water, 30 ˚C, 40 ˚C, 60 ˚C, 95 ˚C)
8. Press the **Rinse** button to select the required number of rinse cycles.
   The maximum number of rinse cycles is five.
   The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed.
   The rinse hold function allows you to remove items that are still wet from the washing machine. (⊗ : No Spin, ⎵: Rinse Hold)
10. Press the **Delay start** button repeatedly to cycle through the available Delay start options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

WF8800RS-02591S_EN.indd 23 2008-09-18 ¿ÀÈÄ 3:31:26

washing a load of laundry

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.

Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.

Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

Determining the load capacity

Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity	
Model	WF8804/ WF8802/ WF8800	WF8704/ WF8702/ WF8700
Cotton - average/lightly soiled - heavily soiled	8.0 kg	7.0 kg
Synthetics	3.0 kg	3.0 kg
Sports Wear	2.5 kg	2.5 kg
Delicates	2.5 kg	2.5 kg
Wool	2.0 kg	2.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Duvets, the wash time may be lengthened or the spin efficiency may be degraded.
- For Bedding or Duvets, the recommended load capacity is 1.8(kg) or less.

WF8800RS-02591S_EN.indd 24 2008-09-18 ¿ÀÈÄ 3:31:26

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

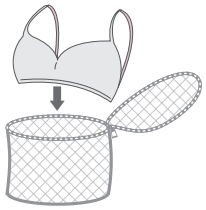

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

CAUTION Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use “low suds” laundry detergent, which is designed for automatic washing machines.
Follow the detergent manufacturer’s recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

Do NOT open the detergent drawer when your washing machine is running.

1. Pull out the detergent drawer on the left side of the control panel.
2. Add the recommended amount of laundry detergent directly into the detergent compartment Ⅱ before starting your washing machine.
3. Add the recommended amount of fabric softener into the softener compartment ❀ if required.
4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment Ⅰ.

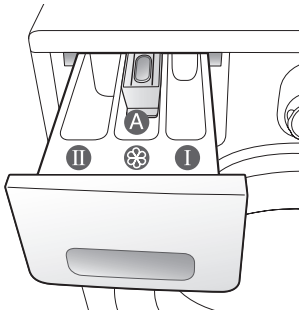

When washing large items do NOT use the following detergent types.

- Tablet and capsule type detergents
- Detergents using a ball and net

Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked.)

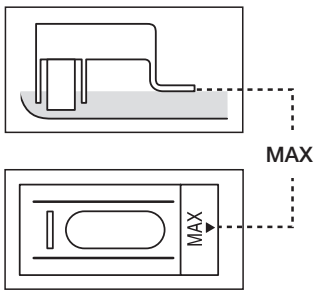

WF8800RS-02591S_EN.indd 25 2008-09-18 ¿ÀÈÄ 3:31:27

cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter cover using a coin or a key.

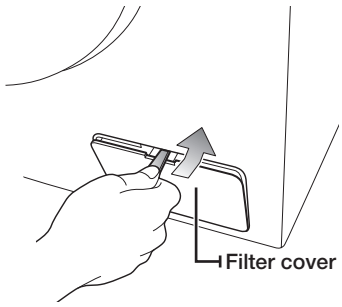

3. Unscrew the emergency drain cap by turning it to the left.

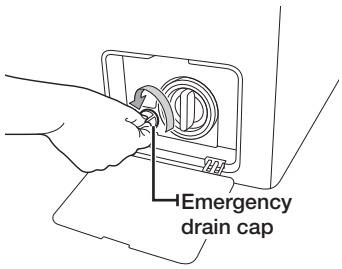

4. Hold the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
5. Allow all the water to flow into a bowl.
6. Reinsert the drain tube and screw the cap back on.
7. Replace the filter-cover.

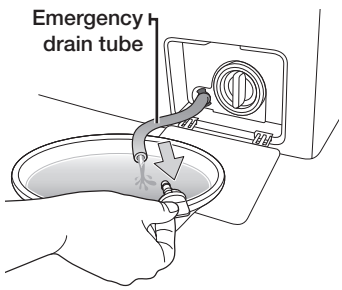

CLEANING THE EXTERIOR

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

WF8800RS-02591S_EN.indd 26 2008-09-18 ¿ÀÈÄ 3:31:27

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS

1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the liquid detergent divider from the detergent drawer

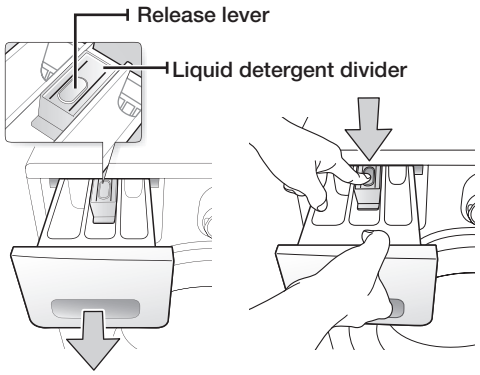

3. Wash all parts under running water.

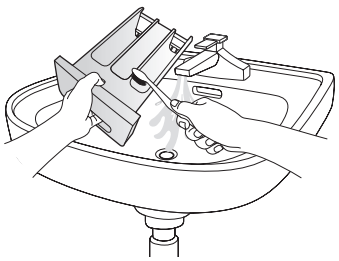

4. Clean the drawer recess with an old toothbrush.
5. Replace the liquid detergent divider by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

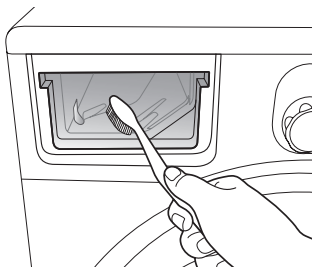

CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of “5E” is displayed. (Refer to “Draining the washing machine in an emergency” in the previous page.)

1. Open the filter cover by using a key or coin.
2. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
3. Unscrew the debris filter cap.

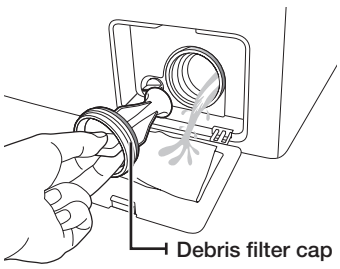

4. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
5. Replace the debris filter cap.
6. Replace the filter cover.

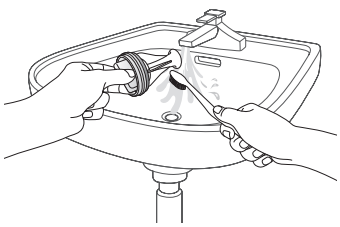

WF8800RS-02591S_EN.indd 27 2008-09-18 ¿ÀÈÄ 3:31:28

cleaning and maintaining your washing machine

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of “4E” is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it’s better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the Quick 29’ cycle and add bleach to the bleach compartment. Run your washing machine through the cycle without a load.
2. Turn the water taps off and disconnect the inlet hoses.
3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.

If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

WF8800RS-02591S_EN.indd 28 2008-09-18 ¿ÀÈÄ 3:31:28

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remains in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• The door will not open until 3 minutes after the machine stops or the power turns off.

If the problem persists, contact your local Samsung Customer Service.

WF8800RS-02591S_EN.indd 29 2008-09-18 ¿ÀÈÄ 3:31:28

troubleshooting and information codes

INFORMATION CODES

When your washing machine malfunctions, you may see an information code on the display. If that happens, check this table and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Close the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an “UE” error message will be shown in the display window.
cE/3E	• Call the after-sales service.

For any codes not listed above, or if the suggested solution doesn’t fix the problem, call your Samsung Service Centre or local Samsung dealer.

WF8800RS-02591S_EN.indd 30 2008-09-18 ¿ÀÈÄ 3:31:28

cycle chart

CYCLE CHART

(● user option)

PROGRAM	Max load(kg)		DETERGENT			Max Temp (˚C)
	WF8804/ WF8802/ WF8800	WF8704/ WF8702/ WF8700	Pre-wash	wash	Softener	
Cotton	8.0	7.0	●	yes	●	95
Synthetics	3.0	3.0	●	yes	●	60
Sports Wear	2.5	2.5	●	yes	●	60
Delicates	2.5	2.5	-	yes	-	40
Wool	2.0	2.0	-	yes	-	40
Handwash	2.0	2.0	-	yes	●	40
Baby Care	4.0	3.0	●	yes	●	95
Daily Wash	4.0	3.0	●	yes	●	60
Quick 29’	3.0	3.0	-	yes	●	60

PROGRAM	Spin Speed(MAX) rpm			Delay start	Cycle time (min)
	WF8804/ WF8704	WF8802/ WF8702	WF8800/ WF8700		
Cotton	1400	1200	1000	●	120
Synthetics	1200	1200	1000	●	84
Sports Wear	1200	1200	1000	●	65
Delicates	800	800	800	●	45
Wool	800	800	800	●	37
Handwash	400	400	400	●	30
Baby Care	1400	1200	1000	●	129
Daily Wash	1200	1200	1000	●	65
Quick 29’	1400	1200	1000	●	29

1. A cycle with a prewash takes approx. 15 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
3. Consumption in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
4. When the Intensive Wash function is selected, the cycle time is increased for each cycle.

WF8800RS-02591S_EN.indd 31 2008-09-18 ¿ÀÈÄ 3:31:28

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing, and dry cleaning when necessary.
The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundering problems.

	Resistant material		Can be ironed at 100 ˚C max
	Delicate fabric		Do not iron
	Item may be washed at 95 ˚C		Can be dry cleaned using any solvent
	Item may be washed at 60 ˚C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item may be washed at 40 ˚C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item may be washed at 30 ˚C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manu-facturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

WF8800RS-02591S_EN.indd 32 2008-09-18 ¿ÀÈÄ 3:31:29

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE					
DIMENSIONS			WF8804ES/WF8804RS/WF8804JS WF8802ES/WF8802RS/WF8802JS WF8800ES/WF8800RS/WF8800JS			WF8704ES/WF8704RS/WF8704JS WF8702ES/WF8702RS/WF8702JS WF8700ES/WF8700RS/WF8700JS		
			W598mm X D600mm X H844mm			W598mm X D600mm X H844mm		
WATER PRESSURE			50 kPa ~ 800 kPa					
WATER VOLUME			64 ℓ			56 ℓ		
NET WEIGHT			WF8804ES/ WF8804RS/ WF8804JS	WF8802ES/ WF8802RS/ WF8802JS	WF8800ES/ WF8800RS/ WF8800JS	WF8704ES/ WF8704RS/ WF8704JS	WF8702ES/ WF8702RS/ WF8702JS	WF8700ES/ WF8700RS/ WF8700JS
			74 kg	73 kg	72 kg	65 kg	64 kg	63 kg
WASH AND SPIN CAPACITY			8.0 kg			7.0 kg		
POWER CONSUMPTION	MODEL		WF8804ES/WF8804RS/WF8804JS WF8802ES/WF8802RS/WF8802JS WF8800ES/WF8800RS/WF8800JS			WF8704ES/WF8704RS/WF8704JS WF8702ES/WF8702RS/WF8702JS WF8700ES/WF8700RS/WF8700JS		
	WASHING		220 V	150 W		220 V	150 W	
			240 V	150 W		240 V	150 W	
	WASH AND HEATING		220 V	2200 W		220 V	2200 W	
			240 V	2400 W		240 V	2400 W	
	SPIN	MODEL	WF8804ES/ WF8804RS/ WF8804JS	WF8802ES/ WF8802RS/ WF8802JS	WF8800ES/ WF8800RS/ WF8800JS	WF8704ES/ WF8704RS/ WF8704JS	WF8702ES/ WF8702RS/ WF8702JS	WF8700ES/ WF8700RS/ WF8700JS
		230V	600 W	550 W	500 W	600 W	550 W	500 W
	PUMPING		34 W					
PACKAGE WEIGHT	MODEL		WF8804ES/WF8804RS/WF8804JS WF8802ES/WF8802RS/WF8802JS WF8800ES/WF8800RS/WF8800JS			WF8704ES/WF8704RS/WF8704JS WF8702ES/WF8702RS/WF8702JS WF8700ES/WF8700RS/WF8700JS		
	PAPER		2.5 kg			2.5 kg		
	PLASTIC		1.0 kg			1.5 kg		
SPIN REVOLUTIONS	MODEL		WF8804ES/WF8704ES WF8804RS/WF8704RS WF8804JS/WF8704JS		WF8802ES/WF8702ES WF8802RS/WF8702RS WF8802JS/WF8702JS		WF8800ES/WF8700ES WF8800RS/WF8700RS WF8800JS/WF8700JS	
	rpm		1400		1200		1000	

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

WF8800RS-02591S_EN.indd 33 2008-09-18 ¿ÀÈÄ 3:31:29

memo

memo

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
THAILAND	1800-29-3232 02-689-3232	www.samsung.com/th

Code No. DC68-02591S_EN

WF8804JS(A/F/G/H/S/V/W/Z)
WF8802JS(A/F/G/H/S/V/W/Z)
WF8800JS(A/F/G/H/S/V/W/Z)
WF8704JS(A/F/G/H/S/V/W/Z)
WF8702JS(A/F/G/H/S/V/W/Z)
WF8700JS(A/F/G/H/S/V/W/Z)
WF8804ES(A/F/G/H/S/V/W/Z)
WF8802ES(A/F/G/H/S/V/W/Z)
WF8800ES(A/F/G/H/S/V/W/Z)
WF8704ES(A/F/G/H/S/V/W/Z)
WF8702ES(A/F/G/H/S/V/W/Z)
WF8700ES(A/F/G/H/S/V/W/Z)
WF8804RS(A/F/G/H/S/V/W/Z)
WF8802RS(A/F/G/H/S/V/W/Z)
WF8800RS(A/F/G/H/S/V/W/Z)
WF8704RS(A/F/G/H/S/V/W/Z)
WF8702RS(A/F/G/H/S/V/W/Z)
WF8700RS(A/F/G/H/S/V/W/Z)

เครื่องซักผ้า
คู่มือผู้ใช้

imagine the possibilities

ขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ Samsung
ในการรับบริการที่ครบครันยิ่งขึ้น
โปรดลงทะเบียนผลิตภัณฑ์ได้ที่

www.samsung.com/global/register

SAMSUNG

WF8800RS-02591S_TH.indd 1 9/18/2008 8:34:20 PM

คุณสมบัติของเครื่องซักผ้า Samsung เครื่องใหม่ของคุณ

เครื่องซักผ้าเครื่องใหม่ของคุณจะเปลี่ยนความรู้สึกในการซักผ้าของคุณอย่างสิ้นเชิง ตั้งแต่ความจุที่เหนือกว่าไปจนถึงประสิทธิภาพในการใช้พลังงาน เครื่องซักผ้า Samsung มีคุณสมบัติเพียบพร้อมที่จะทำให้งานหนักกลายเป็นเรื่องง่ายสำหรับคุณ

- **ระบบสำหรับเสื้อผ้าเด็ก**

  เครื่องซักผ้า Samsung มีโปรแกรมซักผ้าที่เพิ่มการปกป้องเสื้อผ้าเด็กที่มีผิวละเอียดอ่อน
  โปรแกรมเหล่านี้จะช่วยลดความระคายเคืองจากผงซักฟอกตกค้าง นอกจากนี้ โปรแกรมเหล่านี้จะแบ่งผ้าออกเป็นประเภทต่างๆ และซักตามลักษณะของผ้าเพื่อให้เด็กรู้สึกได้ถึงความสะอาดสดชื่นเมื่อสวมใส่เสื้อผ้า

- **ล็อคป้องกันเด็ก**

  ฟังก์ชันล็อคป้องกันเด็กช่วยป้องกันมือไม้ให้มือน้อยๆ ที่ซุกซนสามารถเปิดเครื่องซักผ้าได้โดยไม่ตั้งใจ
  คุณลักษณะเพื่อความปลอดภัยนี้ช่วยป้องกันไม่ให้เด็กๆ เล่นกับการทำงานของเครื่องซักผ้า และยังเตือนให้คุณทราบเมื่อมีการใช้งาน

- **ผ่านการรับรองสำหรับขนสัตว์**

  เครื่องซักผ้านี้ผ่านการทดสอบและผ่านข้อกำหนดของ Woolmark Company สำหรับผลิตภัณฑ์ขนสัตว์ที่ใช้เครื่องซักผ้าได้
  โปรดซักผ้าตามคำแนะนำที่ฉลากของผ้า ตามที่ระบุโดย Woolmark และ Samsung

- **ตั้งเวลาล่วงหน้า**

  ตั้งเวลาสิ้นสุดสำหรับโปรแกรมซักได้ถึง 19 ชั่วโมง โดยเพิ่มได้ครั้งละหนึ่งชั่วโมง เพิ่มความสะดวกในการใช้เครื่องซักผ้า โดยเฉพาะเมื่อคุณต้องออกจากบ้าน

- **การซักเร็ว**

  ถ้าคุณไม่มีเวลา การซักผ้าที่ใช้เวลาไม่ถึง 30 นาทีจะช่วยให้คุณมีเวลาเพิ่มขึ้นได้อีกเหลือเฟือ
  โปรแกรมซักเร็ว 29 นาทีของเราจะเป็นทางออกสำหรับวันที่แสนยุ่ง ขณะนี้คุณสามารถซักเสื้อผ้าชิ้นโปรดได้ในเวลาเพียง 29 นาทีเท่านั้น

- **โปรแกรมถนอมผ้าและซักด้วยมือ**

  ให้การดูแลเป็นพิเศษด้วยอุณหภูมิที่เหมาะสม การซักที่นุ่มนวลและปริมาณน้ำที่พอเหมาะ

- **เครื่องทำความร้อนที่เป็นเซรามิคเพื่อความทนทานและการประหยัดพลังงาน (เฉพาะบางรุ่น)**

  นวัตกรรมเครื่องทำความร้อนที่เป็นเซรามิคของเรามีความทนทานมากกว่าเครื่องทำความร้อนทั่วไปถึงสองเท่า
  ซึ่งจะช่วยประหยัดเงินสำหรับการซ่อมแซม รวมทั้งยังช่วยขจัดระดับความกระด้างของน้ำและประหยัดพลังงาน

WF8800RS-02591S_TH.indd 2 9/18/2008 8:34:20 PM

- **การประหยัดพลังงาน A+AA**

  เราสร้างสรรค์สิ่งที่มีคุณภาพ WF8804(ES/RS/JS)/WF8704(ES/RS/JS) ของ Samsung ซึ่งเป็นรุ่นที่มีรอบการหมุน 1400 รอบต่อนาทีอันเป็นเทคโนโลยีขั้นสูงล่าสุดของเรา ได้รับคะแนน A สามตัว: A+ สำหรับการใช้พลังงาน, A สำหรับประสิทธิภาพการซัก และ A สำหรับประสิทธิภาพการปั่นหมาด ผลคือคุณจะมีเวลาว่างและเงินมากขึ้นสำหรับสิ่งที่สำคัญจริงๆ ซึ่งก็คือ คุณและครอบครัว

- **ระบบ Air Wash (แอร์วอช) (เฉพาะบางรุ่น)**

  คืนความสดชื่นแก่ผ้าชิ้นโปรดของคุณด้วยการใช้อากาศหลังจากงานปาร์ตี้ (กลิ่นอาหาร บุหรี่) คุณไม่จำเป็นต้องซักผ้าที่ไม่เปื้อนอีกต่อไป เพียงเติมความสดชื่นให้กับผ้าด้วย 3 โปรแกรมสำหรับเนื้อผ้าชนิดต่างๆ

- **ประตูแบบกว้าง**

  ช่องประตูกว้างพิเศษเพื่อการดูที่สะดวก ใส่และนำผ้าออกได้ง่าย โดยเฉพาะสำหรับผ้าชิ้นใหญ่เช่นผ้าปูเตียงและผ้าขนหนู ฯลฯ

คู่มือผู้ใช้นี้ประกอบด้วยข้อมูลอันเป็นประโยชน์เกี่ยวกับการติดตั้ง การใช้งาน และดูแลรักษาเครื่องซักผ้า Samsung ของคุณ โปรดอ่านคู่มือนี้เพื่อดูคำอธิบายแผงควบคุม คำแนะนำในการใช้เครื่องซักผ้า เคล็ดลับในการใช้ประโยชน์จากคุณสมบัติและฟังก์ชันของวิทยาการล้ำหน้า หัวข้อ "**การแก้ไขปัญหาและรหัสข้อมูล**" ในหน้า 29 จะบอกให้คุณทราบถ้ามีสิ่งผิดปกติกับเครื่องซักผ้าของคุณ

WF8800RS-02591S_TH.indd 3 9/18/2008 8:34:21 PM

ข้อมูลเกี่ยวกับความปลอดภัย

ในคู่มือเล่มมนี้ คุณจะพบกับคำเตือน ⚠ และข้อควรระวัง ⚠ ซึ่งข้อมูลเหล่านี้ตลอดจนข้อมูลสำคัญด้านความปลอดภัยต่อไปนี้มิได้ครอบคลุมถึงเงื่อนไขและสถานการณ์ทั้งหมดที่อาจเกิดขึ้น คุณมีหน้าที่จะต้องใช้สามัญสำนึก ความระมัดระวัง และใส่ใจกับการติดตั้ง บำรุงรักษา และใช้งานเครื่องซักผ้า Samsung ไม่มีส่วนรับผิดต่อความเสียหายที่เกิดจากการใช้งานอย่างไม่เหมาะสม

สัญลักษณ์และคำเตือนเพื่อความปลอดภัยที่สำคัญ

ความหมายของสัญลักษณ์และเครื่องหมายในคู่มือผู้ใช้นี้:

⚠ **คำเตือน**	อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด **การบาดเจ็บสาหัสหรือเสียชีวิต**
⚠ **ข้อควรระวัง**	อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด **การบาดเจ็บหรือทรัพย์สินเสียหาย**
⚠ **ข้อควรระวัง**	ในการลดความเสี่ยงจากไฟ การระเบิด ไฟฟ้าช็อต หรือการบาดเจ็บขณะใช้เครื่องซักผ้า โปรดปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยต่อไปนี้:

	ห้ามทำ
	ห้ามถอดประกอบ
	ห้ามสัมผัส
	ทำตามคำแนะนำอย่างเคร่งครัด
	ถอดปลั๊กของเครื่องซักผ้าจากเต้าเสียบที่ผนัง
	ตรวจสอบว่าเครื่องมีการลงกราวด์เพื่อป้องกันไฟฟ้าดูด
	ติดต่อศูนย์บริการเพื่อขอรับความช่วยเหลือ
	หมายเหตุ

สัญลักษณ์คำเตือนเหล่านี้มีให้เพื่อป้องกันการบาดเจ็บ
โปรดปฏิบัติตามอย่างเคร่งครัด
หลังจากอ่านส่วนนี้แล้ว โปรดเก็บไว้เพื่อนำมาอ้างอิงในภายหลัง

อ่านคำแนะนำทั้งหมดก่อนที่จะใช้อุปกรณ์

เช่นเดียวกับอุปกรณ์ทุกชนิดที่ใช้ไฟฟ้าและมีชิ้นส่วนที่เคลื่อนไหว อุปกรณ์นี้อาจมีอันตรายได้ ในการใช้อุปกรณ์นี้อย่างปลอดภัย โปรดทำความเข้าใจกับการทำงานและใช้ความระมัดระวังขณะใช้งาน

ติดตั้งและเก็บเครื่องซักผ้าไว้ภายในอาคาร ให้พ้นจากสภาพอากาศภายนอก

ติดตั้งและปรับระดับเครื่องซักผ้าบนพื้นที่สามารถรับน้ำหนักได้

เครื่องซักผ้าต้องได้รับการลงกราวด์อย่างเหมาะสม ห้ามเสียบปลั๊กกับเต้าเสียบที่ไม่ได้ลงกราวด์

WF8800RS-02591S_TH.indd 4 9/18/2008 8:34:21 PM

ข้อควรระวัง

ในการลดความเสี่ยงที่จะเกิดไฟไหม้หรือระเบิด:

- ห้ามซักผ้าที่มีการซัก แช่ หรือผ่านการใช้น้ำมันเบนซิน น้ำยาซักแห้ง หรือสารไวไฟอื่นๆ ซึ่งจะทำให้เกิดไอที่สามารถติดไฟหรือระเบิดได้ โปรดนำผ้าที่ผ่านการใช้สารทำละลายซักแห้งหรือสารไวไฟอื่นๆ มาล้างน้ำก่อนที่จะใส่ลงในเครื่องซักผ้า โปรดขจัดของเหลว ของแข็ง และไอของวัตถุไวไฟดังกล่าวออกจนหมด สารอันตรายดังกล่าวรวมถึงอะซีโทน แอลกอฮอล์ที่แปรรูป น้ำมันเบนซิน น้ำมันก๊าด สารทำความสะอาดในบ้านบางชนิด และน้ำยาลบคราบ ขี้ผึ้ง และสารขจัดขี้ผึ้ง
- ห้ามใส่น้ำมันเบนซิน น้ำยาซักแห้ง หรือสารไวไฟอื่นๆ ในเครื่องซักผ้า
- ในบางกรณีอาจมีก๊าซไฮโดรเจนเกิดขึ้นในระบบน้ำร้อน เช่น เครื่องทำน้ำร้อนของคุณ ซึ่งไม่ได้ใช้งานเป็นเวลาสองสัปดาห์ขึ้นไป ก๊าซไฮโดรเจนนั้นสามารถระเบิดได้ ถ้าระบบน้ำร้อนของคุณไม่ได้มีการใช้งานเป็นเวลาสองสัปดาห์ขึ้นไป ให้เปิดก๊อกน้ำร้อนทั้งหมดในบ้าน ปล่อยให้น้ำไหลสักครู่ก่อนที่จะใช้เครื่องซักผ้า ซึ่งจะเป็นการระบายก๊าซไฮโดรเจนสะสม เนื่องจากก๊าซไฮโดรเจนนั้นเป็นวัตถุไวไฟ โปรดอย่าสูบบุหรี่หรือจุดไฟในระหว่างนี้

ระบายอากาศทันที โดยไม่สัมผัสกับปลั๊กไฟ ถ้ามีก๊าซรั่ว

ถอดปลั๊กไฟก่อนที่จะซ่อมบำรุงเครื่องซักผ้า

ก่อนการซักแต่ละครั้ง ให้นำสิ่งของออกจากประเป๋าของผ้าก่อน ของแข็งขนาดเล็กที่มีรูปร่างต่างๆ เล่น เหรียญ มีด เข็มหมุด และคลิปหนีบกระดาษอาจทำให้เครื่องซักผ้าเสียหาย ห้ามซักผ้าที่มีหัวเข็มขัด กระดุม หรือโลหะขนาดใหญ่ติดอยู่

ห้ามเปิดประตูเครื่องซักผ้า ถ้าคุณยังเห็นน้ำภายใน ตรวจสอบว่าได้ระบายน้ำจนหมดแล้วก่อนที่จะเปิดประตู

ห้ามซ่อมแซม เปลี่ยน หรือซ่อมบำรุงส่วนหนึ่งส่วนใดของเครื่องซักผ้าด้วยตนเอง ยกเว้นคุณจะเข้าใจคำแนะนำในการซ่อมบำรุงด้วยตนเองที่แนะนำ และมีทักษะในการดำเนินการทั้งหมด การทำงานโดยบุคคลที่ไม่มีความชำนาญจะทำให้การรับประกันของคุณเป็นโมฆะ

ต่อเครื่องซักผ้าเข้ากับท่อจ่ายน้ำหลักโดยใช้ท่อชุดใหม่ ห้ามใช้ท่อชุดเก่า

ท่อจ่ายน้ำจะมีการเสื่อมสภาพเมื่อเวลาผ่านไป ตรวจสอบท่อเป็นประจำ เพื่อดูรอยปูด หัก งอ รอยแตก สึกหรอ หรือรั่วซึม และเปลี่ยนท่อใหม่ตามต้องการ หรืออย่างน้อยทุกห้าปี

โปรดนำหมุดของบรรจุภัณฑ์ที่ใช้ในการขนส่งออกก่อนที่จะใช้อุปกรณ์ มิฉะนั้นอาจเกิดความเสียหายแก่อุปกรณ์อย่างร้ายแรง โปรดดูที่หน้า 12 หัวข้อ “การนำหมุดสำหรับการขนส่งออก”

ก่อนที่จะซักผ้าเป็นครั้งแรก คุณต้องเปิดเครื่องให้ทำงานครบทุกขั้นตอนโดยไม่ใส่ผ้า
โปรดดูที่หัวข้อ “การซักครั้งแรก”

WF8800RS-02591S_TH.indd 5 9/18/2008 8:34:22 PM

ข้อมูลเกี่ยวกับความปลอดภัย

อุปกรณ์นี้ได้รับการออกแบบสำหรับใช้ในบ้านพักอาศัยเท่านั้น

คำเตือน โปรดให้ช่างผู้มีความชำนาญงานเป็นผู้ต่อท่อน้ำและสายไฟ โปรดปฏิบัติตามคู่มือผู้ใช้ (โปรดดูที่ "การติดตั้งเครื่องซักผ้า") และระเบียบว่าด้วยความปลอดภัยของเขตพื้นที่

ก่อนที่จะทำความสะอาดหรือดูแลรักษาเครื่อง โปรดถอดปลั๊กของเครื่องออกจากแหล่งจ่ายไฟ

ถอดปลั๊กของเครื่องและปิดน้ำทุกครั้งหลังจากใช้งาน

ตรวจสอบว่าไม่มีสิ่งใดอยู่ในกระเป๋าเสื้อผ้าที่จะซัก

ของแข็ง ของมีคม เช่น เหรียญ เข็มกลัด ตะปู ตะปูควง หรือก้อนหินอาจทำให้เกิดความเสียหายแก่อุปกรณ์ได้

อย่าให้สัตว์เลี้ยงหรือเด็กเล่นที่ด้านบนหรือภายในเครื่อง เนื่องจากจะทำให้บาดเจ็บหรือหายใจไม่ออก

ประตูกระจกจะร้อนจัด ระหว่างกระบวนการซัก ห้ามสัมผัสประตูกระจกขณะที่เครื่องทำงาน

โปรดอย่าซ่อมแซมเครื่องด้วยตนเอง การซ่อมแซมโดยผู้ที่ไม่ชำนาญอาจทำให้เกิดการบาดเจ็บ และ/หรือทำให้อุปกรณ์เกิดความเสียหายอย่างรุนแรง

กรณีที่ปลั๊ก (สายไฟ) ของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องให้ผู้ผลิต ตัวแทนให้บริการ หรือผู้ที่มีความชำนาญเป็นผู้เปลี่ยนสายไฟ เพื่อไม่ให้เกิดอันตราย

อุปกรณ์นี้ควรได้รับการซ่อมบำรุงโดยศูนย์บริการที่ได้รับอนุญาต และควรใช้เฉพาะอะไหล่ที่ได้มาตรฐานเท่านั้น

คำเตือน ห้ามปล่อยให้เด็ก (หรือสัตว์เลี้ยง) เล่นหรืออยู่ในเครื่องซักผ้า ประตูเครื่องซักผ้านั้นไม่สามารถเปิดได้โดยง่ายจากภายใน และเด็กอาจได้รับบาดเจ็บร้ายแรงถ้าติดอยู่ภายใน

อุปกรณ์นี้ไม่ได้มีไว้ให้ใช้โดยเด็กหรือบุคคลที่ไม่แข็งแรง ยกเว้นจะได้รับการดูแลอย่างใกล้ชิดจากบุคคลที่รับผิดชอบ เพื่อให้มั่นใจว่าสามารถใช้เครื่องได้อย่างปลอดภัย

โปรดดูแลมิให้เด็กเล็กเล่นกับอุปกรณ์นี้

ในการใช้อุปกรณ์นี้อย่างปลอดภัย โปรดทำความเข้าใจกับการทำงานและใช้ความระมัดระวังขณะใช้งาน

ควรจัดวางอุปกรณ์นี้เพื่อให้สามารถเข้าถึงปลั๊กไฟ ก๊อกน้ำและท่อระบายน้ำได้โดยง่าย

คำเตือน บรรจุภัณฑ์อาจเป็นอันตรายต่อเด็ก โปรดเก็บบรรจุภัณฑ์ทั้งหมด (ถุงพลาสติก โฟม ฯลฯ) ให้พ้นมือเด็ก

ห้ามใช้น้ำผ่านกระบวนการบำบัด ซึ่งประกอบด้วยน้ำมัน ครีม หรือโลชัน ซึ่งมักพบในร้านดูแลผิวพรรณหรือร้านนวด

- มิฉะนั้นจะทำให้วัสดุเกิดความเสียหาย และทำให้เกิดการทำงานผิดพลาดหรือน้ำรั่ว

WF8800RS-02591S_TH.indd 6 9/18/2008 8:34:22 PM

ตามปกติ ถังซักสเตนเลสจะไม่ขึ้นสนิม แต่ถ้ามีโลหะ เช่น กิ๊บติดผมหลงเหลืออยู่ในถังซักเป็นเวลานาน ถังอาจเป็นสนิมได้

- ห้ามทิ้งให้น้ำหรือสารฟอกขาวที่มีคลอรีนเหลืออยู่ในถังซักเป็นเวลานาน
- ห้ามใช้หรือปล่อยให้น้ำที่มีธาตุเหล็กอยู่ในถังเป็นเวลานาน หากถังซักเริ่มมีลักษณะเป็นสนิมที่พื้นผิว ให้ใช้สารทำความสะอาด (ไม่เป็นกรดหรือด่าง) กับพื้นผิว และใช้ฟองน้ำหรือผ้านุ่มทำความสะอาด (ห้ามใช้แปรงขนลวดเด็ดขาด)

สำหรับเครื่องซักผ้าที่มีช่องระบายอากาศที่ฐาน โปรดอย่าให้พรมหรือวัสดุชนิดอื่นปิดกั้นช่องนี้

ใช้ชุดท่อใหม่ ไม่ควรนำชุดท่อเดิมกลับมาใช้ใหม่

WF8800RS-02591S_TH.indd 7 9/18/2008 8:34:22 PM

สารบัญ

การติดตั้งเครื่องซักผ้า 9

9	**การตรวจสอบชิ้นส่วนอุปกรณ์**
10	**การปฏิบัติตามข้อกำหนดในการติดตั้ง**
10	คำเตือนเกี่ยวกับไฟฟ้าและการลงกราวด์
10	การจ่ายน้ำ
11	การระบายน้ำ
11	พื้น
11	อุณหภูมิโดยรอบ
11	การติดตั้งในซุ้มหรือตู้
11	**การติดตั้งเครื่องซักผ้า**

การซักผ้า 17

17	**การซักครั้งแรก**
17	**คำแนะนำเบื้องต้น**
18	**การใช้แผงควบคุม**
20	ล็อคป้องกันเด็ก
20	ปิดเสียง
20	Delay start (ตั้งเวลาล่วงหน้า)
21	Air Wash (แอร์วอช)
22	การซักโดยใช้ปุ่มเลือกโปรแกรมซัก
23	การซักด้วยตนเอง
24	**คำแนะนำของผ้า**
25	**ข้อมูลผงซักฟอกและสารเพิ่มเติมต่าง ๆ**
25	ควรใช้ผงซักฟอกแบบใด
25	ช่องใส่ผงซักฟอก

การทำความสะอาดและดูแลรักษาเครื่องซักผ้า 26

26	**การทิ้งน้ำเมื่อเกิดเหตุฉุกเฉิน**
26	**การทำความสะอาดภายนอก**
27	**การทำความสะอาดช่องใส่และที่พักผงซักฟอก**
27	**การทำความสะอาดตัวกรองเศษผ้า**
28	**การทำความสะอาดตัวกรองท่อจ่ายน้ำ**
28	**การซ่อมแซมเครื่องซักผ้าหากน้ำแข็งตัว**
28	**การจัดเก็บเครื่องซักผ้า**

การแก้ไขปัญหาและรหัสข้อมูล 29

29	**ตรวจสอบสิ่งต่อไปนี้ถ้าเครื่องซักผ้าของคุณ...**
30	**รหัสข้อมูล**

ผังโปรแกรม 31

31	**ผังโปรแกรม**

ภาคผนวก 32

32	**ผังการดูแลผ้า**
32	**การปกป้องสิ่งแวดล้อม**
32	**ประกาศเกี่ยวกับมาตรฐาน**
33	**ข้อมูลจำเพาะ**

WF8800RS-02591S_TH.indd 8 9/18/2008 8:34:22 PM

การติดตั้งเครื่องซักผ้า

โปรดให้ผู้ติดตั้งปฏิบัติตามคำแนะนำนี้อย่างเคร่งครัด เพื่อให้เครื่องซักผ้าใหม่ของคุณทำงานอย่างถูกต้อง และไม่เสี่ยงต่อการบาดเจ็บขณะซักผ้า

การตรวจสอบชิ้นส่วนอุปกรณ์

นำเครื่องซักผ้าออกจากบรรจุภัณฑ์ และตรวจสอบว่าคุณได้รับชิ้นส่วนทั้งหมดที่แสดงด้านล่างนี้ ถ้าเครื่องซักผ้าของคุณได้รับความเสียหายระหว่างการขนส่ง หรือถ้าคุณไม่ได้รับชิ้นส่วนทั้งหมดครบถ้วน โปรดติดต่อฝ่ายบริการลูกค้าของ Samsung หรือตัวแทนจำหน่ายของ Samsung

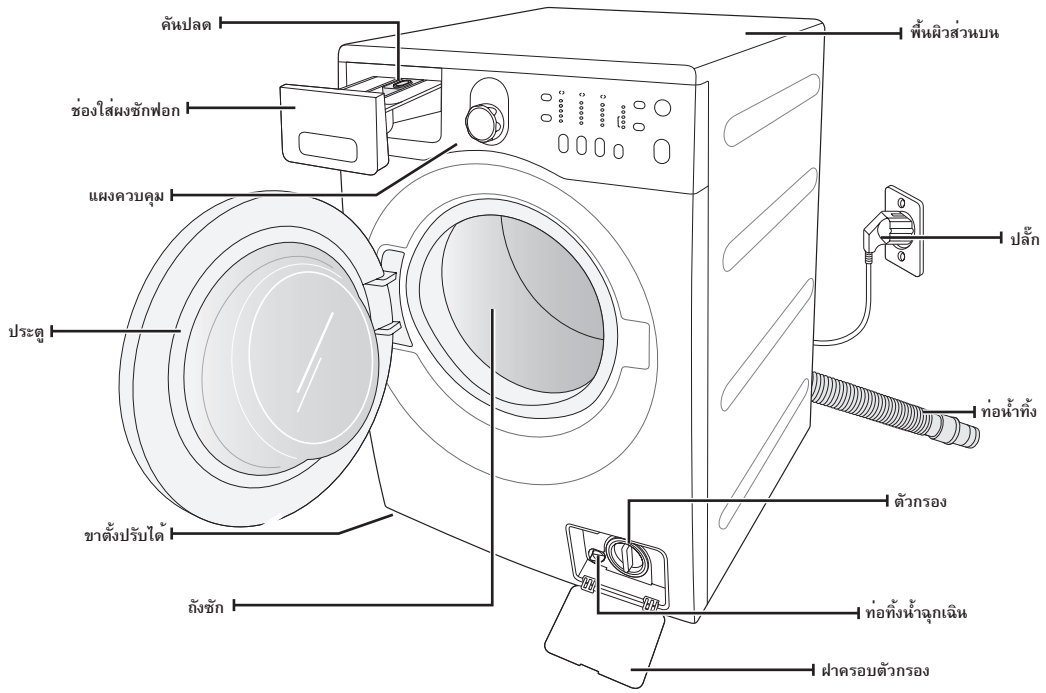



ประแจ



ที่ปิดช่องใส่หมุด

ท่อจ่ายน้ำ



ตัวนำท่อ

WF8800RS-02591S_TH.indd 9 9/18/2008 8:34:22 PM

การติดตั้งเครื่องซักผ้า

การปฏิบัติตามข้อกำหนดในการติดตั้ง

คำเตือนเกี่ยวกับไฟฟ้าและการลงกราวด์

เพื่อป้องกันการเกิดเพลิงไหม้ ไฟฟ้าช็อต หรือการบาดเจ็บโดยไม่จำเป็น การเดินสายและสายกราวด์ทั้งหมดจะต้องกระทำตามข้อกำหนด National Electrical Code ANSI/FNPA, No. 70 ฉบับล่าสุด และรหัสและข้อบังคับในพื้นที่ เจ้าของอุปกรณ์มีหน้าที่จัดหาบริการด้านไฟฟ้าที่เพียงพอสำหรับอุปกรณ์นี้

คำเตือน
ห้ามใช้สายไฟสำหรับต่อ
ใช้สายไฟที่มากับเครื่องซักผ้าเท่านั้น

ขณะที่เตรียมพร้อมสำหรับการติดตั้ง โปรดตรวจสอบว่าแหล่งจ่ายไฟของคุณมีสิ่งต่อไปนี้:

- ฟิวส์หรือเบรกเกอร์ 220V~240V 50Hz 15 แอมป์
- วงจรสาขาแยกสำหรับเครื่องซักผ้าโดยเฉพาะ

เครื่องซักผ้าต้องได้รับการลงกราวด์ ถ้าเครื่องซักผ้าทำงานผิดปกติหรือเสียหาย การลงกราวด์จะช่วยลดความเสี่ยงที่จะเกิดไฟฟ้าช็อต โดยจะเป็นทางระบายกระแสไฟฟ้าที่มีแรงต้านทานน้อยที่สุด
เครื่องซักผ้าของคุณมาพร้อมกับสายไฟที่มีปลั๊กลงกราวด์สามขา สำหรับใช้กับเต้าเสียบไฟฟ้าที่ติดตั้งและลงกราวด์อย่างเหมาะสม

ห้ามต่อสายกราวด์เข้ากับท่อพลาสติก ท่อก๊าซ หรือท่อน้ำร้อน

การเชื่อมต่อสายกราวด์อุปกรณ์อย่างไม่เหมาะสมจะทำให้เกิดไฟฟ้าช็อต
ติดต่อช่างไฟฟ้าหรือช่างซ่อมบำรุงที่มีความชำนาญ ถ้าคุณไม่แน่ใจว่าเครื่องซักผ้ามีการลงกราวด์อย่างเหมาะสมหรือไม่ ห้ามดัดแปลงปลั๊กที่มากับเครื่องซักผ้า ถ้าไม่สามารถใช้ร่วมกับเต้าเสียบได้ โปรดให้ช่างที่มีความชำนาญเป็นผู้ติดตั้งเต้าเสียบที่เหมาะสม

การจ่ายน้ำ

เครื่องซักผ้าของคุณจะเติมน้ำอย่างเหมาะสมเมื่อมีแรงดันน้ำ 50 kPa ~ 800 kPa แรงดันน้ำต่ำกว่า 50 kPa จะทำให้วาล์วน้ำทำงานผิดพลาด ทำให้วาล์วน้ำไม่สามารถปิดอย่างเหมาะสม หรือมิฉะนั้น อาจทำให้เครื่องซักผ้าใช้เวลาในการเติมน้ำนานเกินกว่าที่ระบบควบคุมกำหนด ทำให้เครื่องซักผ้าปิดลง (ในระบบควบคุมมีขีดจำกัดเวลาการเติมน้ำ ได้รับการออกแบบเพื่อป้องกันน้ำล้น/ท่วมถ้าท่อน้ำหลวม)

ก๊อกน้ำต้องห่างไม่เกิน 4 ฟุต (122 ซม.) จากด้านหลังของเครื่องซักผ้า เพื่อให้สามารถต่อท่อจ่ายน้ำที่ให้มากับเครื่องซักผ้าได้

ร้านจำหน่ายอุปกรณ์เดินท่อจะมีท่อจ่ายน้ำความยาวต่างๆ ถึง 10 ฟุต (305 ซม.)

คุณสามารถลดความเสี่ยงของน้ำรั่วและความเสียหายจากน้ำโดย:

- ติดตั้งให้ท่อน้ำอยู่ในระยะที่เอื้อมถึงได้ง่าย
- ปิดก๊อกเมื่อไม่ได้ใช้งานเครื่องซักผ้า
- ตรวจสอบรอยรั่วที่ข้อต่อของท่อจ่ายน้ำเป็นประจำ

คำเตือน
ก่อนที่จะใช้เครื่องซักผ้าเป็นครั้งแรก โปรดตรวจสอบการต่อท่อและวาล์วจ่ายน้ำเพื่อหารอยรั่ว

WF8800RS-02591S_TH.indd 10 9/18/2008 8:34:22 PM

การระบายน้ำ

Samsung แนะนำให้ใช้ท่อตั้งมีความสูง 18 นิ้ว (46 ซม.) ท่อระบายน้ำต้องวางผ่านคลิปท่อระบายน้ำไปยังท่อตั้งดังกล่าว ท่อตั้งจะต้องมีขนาดใหญ่พอที่จะรับเส้นผ่าศูนย์กลางภายนอกของท่อระบายน้ำ ท่อระบายน้ำติดมาจากโรงงาน

พื้น

เพื่อสมรรถนะในการทำงานที่ดีที่สุด โปรดติดตั้งเครื่องซักผ้าบนพื้นที่ก่อสร้างอย่างแข็งแรง พื้นไม้อาจต้องได้รับการเสริมแรงเพื่อลดการสั่นสะเทือน และ/หรือการรับน้ำหนักที่ขาดสมดุล พื้นผิวที่ปูพรมและวัสดุอ่อนนุ่มอาจทำให้เกิดการสั่นสะเทือน และอาจทำให้เครื่องซักผ้าเคลื่อนตัวเล็กน้อยระหว่างรอบการปั่นหมาด

ห้ามติดตั้งเครื่องซักผ้าบนที่ยกพื้นหรือโครงสร้างที่ไม่แข็งแรง

อุณหภูมิโดยรอบ

ห้ามติดตั้งเครื่องซักผ้าในพื้นที่ซึ่งน้ำอาจแข็งตัวได้ เนื่องจากเครื่องซักผ้าของคุณจะมีน้ำอยู่ในวาล์ว ปั๊ม และท่อเสมอ น้ำที่แข็งตัวในท่ออาจทำให้สายพาน ปั๊ม และองค์ประกอบอื่นๆ เสียหาย

การติดตั้งในซุ้มหรือตู้

ในการใช้งานอย่างปลอดภัยและเหมาะสม เครื่องซักผ้าต้องมีระยะห่าง:

ด้านข้าง – 25 มม.

ด้านหลัง – 51 มม.

ด้านบน – 25 มม.

ด้านหน้า - 465 มม.

ถ้าติดตั้งทั้งเครื่องซักผ้าและเครื่องอบผ้าไว้ด้วยกัน ด้านหน้าของซุ้มหรือตู้จะต้องมีช่องเปิดที่ไม่มีสิ่งกีดขวางอย่างน้อย 465 มม. เครื่องซักผ้าเพียงอย่างเดียวจะไม่ต้องมีช่องเปิดสำหรับอากาศโดยเฉพาะ

การติดตั้งเครื่องซักผ้า

ขั้นตอนที่ 1

การเลือกที่ตั้ง

ก่อนที่จะติดตั้งเครื่องซักผ้า โปรดตรวจสอบว่าสถานที่ตั้ง:

- มีพื้นผิวแข็ง ได้ระดับ โดยไม่มีพรมหรือวัสดุปูพื้นที่อาจปิดกั้นการระบายอากาศ
- พ้นจากแสงแดดโดยตรง
- มีการระบายอากาศที่เพียงพอ
- ไม่ทำให้น้ำแข็งตัว (ต่ำกว่า 32 °F หรือ 0 °C)
- ห่างจากแหล่งความร้อน เช่น น้ำมันหรือก๊าซ
- มีพื้นที่ว่างเพียงพอที่ไม่ทำให้เครื่องซักผ้าทับสายไฟ

WF8800RS-02591S_TH.indd 11 9/18/2008 8:34:22 PM

การติดตั้งเครื่องซักผ้า

ขั้นตอนที่ 2

การถอดหมุดสำหรับการขนส่ง

ก่อนที่จะติดตั้งเครื่องซักผ้า คุณต้องนำหมุดสำหรับการขนส่งห้าตัวออกจากด้านหลังของเครื่อง

1. คลายหมุดด้วยประแจที่ให้มา

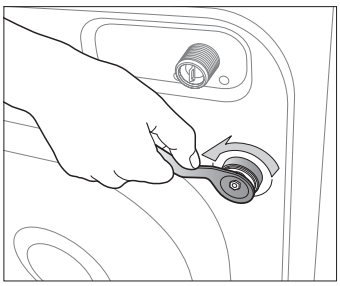

2. ดึงส่วนหัวของหมุดออกทางส่วนกว้างของช่อง สำหรับหมุดแต่ละตัว

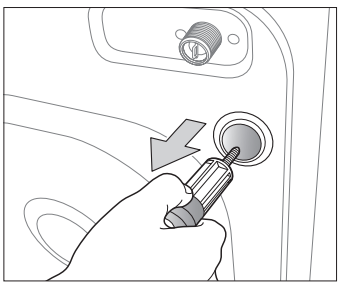

3. นำฝาปิดพลาสติกที่ให้มาใส่ในช่อง

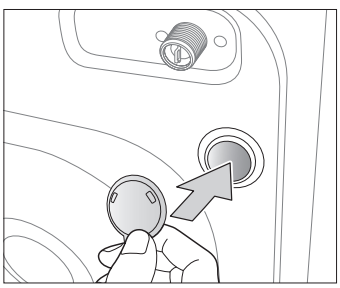

4. เก็บหมุดสำหรับขนส่งไว้ต่างหากในกรณีที่คุณต้องการย้ายเครื่องซักผ้าในอนาคต

⚠ คำเตือน บรรจุภัณฑ์อาจเป็นอันตรายต่อเด็ก โปรดเก็บบรรจุภัณฑ์ทั้งหมด (ถุงพลาสติก โฟม ฯลฯ) ให้พ้นมือเด็ก

WF8800RS-02591S_TH.indd 12 9/18/2008 8:34:23 PM

ขั้นตอนที่ 3

การปรับขาตั้งปรับระดับ

เมื่อติดตั้งเครื่องซักผ้า ให้ตรวจสอบว่าปลั๊กไฟ ท่อจ่ายน้ำและท่อระบายน้ำอยู่ในระยะที่เอื้อมถึงได้ง่าย

1. เลื่อนเครื่องซักผ้าเข้าสู่ที่ติดตั้ง

2. ปรับระดับเครื่องซักผ้าด้วยการหมุนขาตั้งเข้าและออกด้วยมือตามความต้องการ

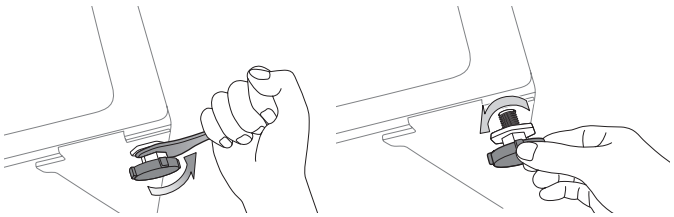

3. เมื่อเครื่องซักผ้าได้ระดับแล้ว ให้ขันน็อตให้แน่นโดยใช้ประแจที่ให้มาพร้อมกับเครื่องซักผ้า

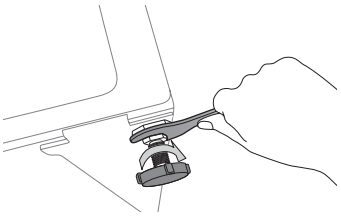

ขั้นตอนที่ 4

การต่อท่อจ่ายน้ำและท่อระบายน้ำ

การต่อท่อจ่ายน้ำ

1. นำข้อต่อรูปตัว L สำหรับท่อจ่ายน้ำเย็นมาต่อเข้ากับท่อน้ำเย็นที่ด้านหลังของเครื่องซักผ้า ขันให้แน่นด้วยมือ

ท่อจ่ายน้ำจะต้องต่อเข้ากับเครื่องซักผ้าและต่อปลายอีกด้านเข้ากับก๊อกน้ำ โปรดอย่าดึงท่อจ่ายน้ำจนตึง หากท่อสั้นเกินไป โปรดเปลี่ยนไปใช้ท่อแรงดันสูงที่ยาวขึ้น

2. ต่อปลายอีกด้านของท่อจ่ายน้ำเย็นเข้ากับก๊อกน้ำเย็นที่อ่างซักล้าง และขันให้แน่นด้วยมือ หากจำเป็น คุณสามารถจัดตำแหน่งของท่อจ่ายน้ำที่เครื่องซักผ้า โดยคลายข้อต่อ หมุนสาย และขันข้อต่อเข้าที่อีกครั้ง

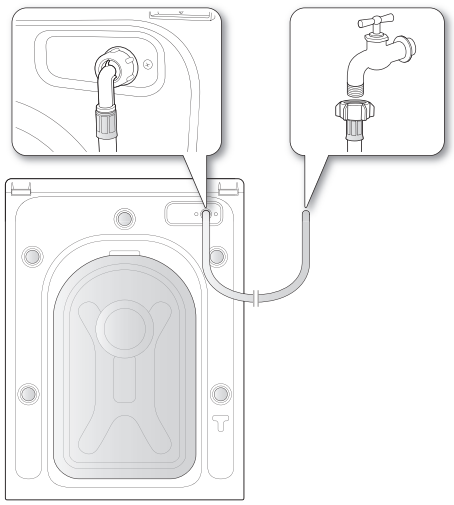

สำหรับบางรุ่นที่มีช่องรับน้ำร้อน:

1. นำข้อต่อรูปตัว L สำหรับท่อจ่ายน้ำร้อนมาต่อเข้ากับท่อน้ำร้อนที่ด้านหลังของเครื่องซักผ้า ขันให้แน่นด้วยมือ
2. ต่อปลายอีกด้านของท่อจ่ายน้ำร้อนเข้ากับก๊อกน้ำร้อนที่อ่างซักล้าง และขันให้แน่นด้วยมือ
3. ใช้อุปกรณ์รูปตัว Y เฉพาะหากคุณต้องการใช้น้ำเย็น

WF8800RS-02591S_TH.indd 13 9/18/2008 8:34:23 PM

การติดตั้งเครื่องซักผ้า

การต่อท่อจ่ายน้ำ (เฉพาะบางรุ่น)

1. ถอดข้อต่อออกจากท่อจ่ายน้ำ

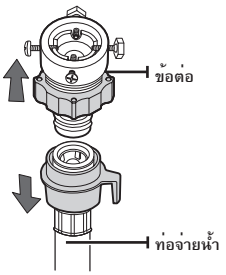

2. ขั้นแรก ให้ใช้ไขควงหัวแฉก '+' เพื่อคลายสกรูสี่ตัวที่ข้อต่อ จากนั้นจับตัวข้อต่อและหมุนส่วน (2) ตามลูกศรจนมีช่องว่าง 5 มม.

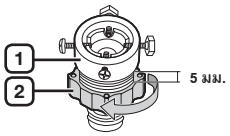

3. ต่อตัวข้อต่อเข้ากับก๊อกน้ำโดยขันสกรูให้แน่นโดยให้ข้อต่ออยู่ด้านบน จากนั้นหมุนส่วน (2) ตามลูกศร และต่อส่วน (1) และ (2) เข้าด้วยกัน

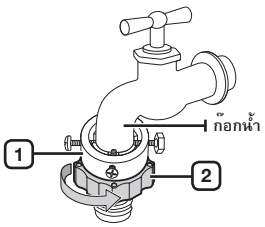

4. ต่อท่อจ่ายน้ำเข้ากับข้อต่อ เมื่อปล่อยส่วน (3) ท่อจะต่อเข้ากับข้อต่อโดยอัตโนมัติและมีเสียง 'คลิก'

หลังจากต่อท่อจ่ายน้ำเข้ากับข้อต่อแล้ว ให้ตรวจสอบว่ามีการเชื่อมต่ออย่างถูกต้อง โดยดึงท่อจ่ายน้ำลง

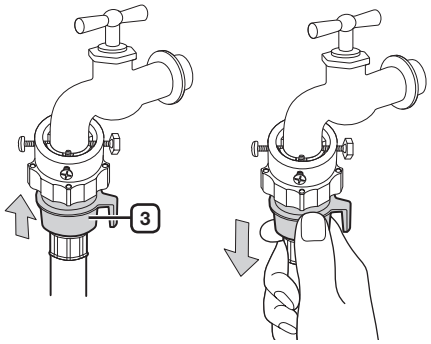

5. ต่อปลายอีกด้านของท่อจ่ายน้ำเข้ากับวาล์วน้ำเข้าที่ด้านหลังของเครื่องขันท่อตามเข็มนาฬิกาจนสุด

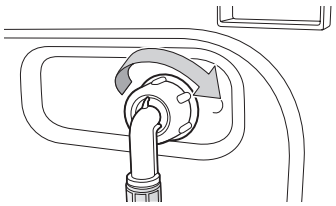

WF8800RS-02591S_TH.indd 14 9/18/2008 8:34:24 PM

6. เปิดน้ำ และดูว่าไม่มีน้ำรั่วจากวาล์วน้ำ ก๊อก หรือข้อต่อ ถ้ามีน้ำรั่ว ให้ทำตามขั้นตอนก่อนหน้านี้ซ้ำ

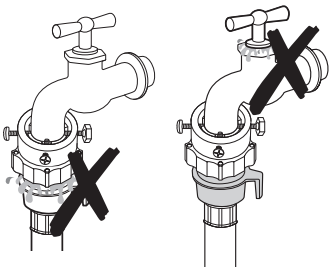

คำเตือน ห้ามใช้เครื่องซักผ้าถ้ามีน้ำรั่ว เนื่องจากอาจทำให้ไฟฟ้าช็อตหรือเกิดการบาดเจ็บได้

- หากก๊อกน้ำมีปากเป็นเกลียว ให้ต่อท่อจ่ายน้ำเข้ากับก๊อกตามภาพ

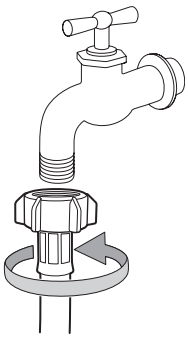

ใช้ก๊อกน้ำแบบทั่วไปสำหรับการจ่ายน้ำ ในกรณีที่ก๊อกเป็นแบบเหลี่ยมหรือใหญ่เกินไป ให้ถอดวงแหวนออกก่อนที่จะใส่ก๊อกเข้ากับข้อต่อ

WF8800RS-02591S_TH.indd 15 9/18/2008 8:34:24 PM

การติดตั้งเครื่องซักผ้า

การต่อท่อน้ำทิ้ง

ปลายของท่อน้ำทิ้งจะสามารถอยู่ในตำแหน่งต่อไปนี้:

1. **เหนือขอบอ่างล้างจาน:** ท่อน้ำทิ้งจะต้องมีความสูงระหว่าง 60 ถึง 90 ซม. ถ้าต้องการให้ส่วนของท่อน้ำทิ้งงอ ให้ใช้ตัวนำท่อที่ให้มาติดตัวนำท่อเข้ากับผนังด้วยตะขอ หรือเกี่ยวกับก๊อกน้ำด้วยเชือก เพื่อไม่ให้ท่อน้ำทิ้งขยับ

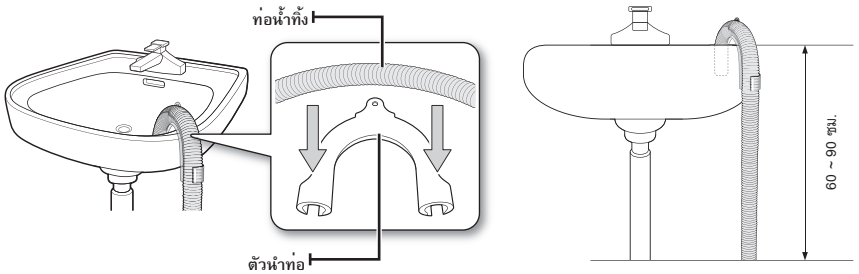

2. **ในท่อสาขาของท่อระบายอ่างซักล้าง:** ท่อแยกน้ำทิ้งจะต้องอยู่เหนือท่อพักของอ่าง เพื่อให้ปลายท่ออยู่เหนือพื้นดินอย่างน้อย 60 ซม.
3. **ในท่อน้ำทิ้ง:** Samsung ขอแนะนำให้คุณใช้ท่อแนวตั้งความสูง 65 ซม. ซึ่งจะต้องไม่สั้นกว่า 60 ซม. และไม่ยาวเกิน 90 ซม.

ขั้นตอนที่ 5

การต่อสายไฟของเครื่องซักผ้า

เสียบปลั๊กไฟเข้ากับเต้าเสียบที่ผนัง ซึ่งมีแรงดันไฟฟ้า 230 โวลต์ 50 เฮิรตซ์ ป้องกันด้วยฟิวส์ 15 แอมป์หรือเบรกเกอร์ (สำหรับข้อมูลเพิ่มเติมเกี่ยวกับข้อกำหนดด้านไฟฟ้าและการลงกราวด์ โปรดดูที่หน้า 10)

WF8800RS-02591S_TH.indd 16 9/18/2008 8:34:25 PM

การซักผ้า

เมื่อใช้เครื่องซักผ้าใหม่ของ Samsung สิ่งที่ยากที่สุดในการซักผ้าก็คือการตัดสินใจว่าจะซักผ้าชิ้นไหนก่อนดี

การซักครั้งแรก

ก่อนที่จะซักผ้าเป็นครั้งแรก คุณต้องเปิดเครื่องให้ทำงานครบทุกขั้นตอนโดยที่ถังซักว่าง (ไม่มีผ้า)

1. กดปุ่ม **Power (เปิด/ปิด)**
2. เติมผงซักฟอกปริมาณเล็กน้อยในช่องใส่ผงซักฟอก Ⅱ ในลิ้นชักผงซักฟอก
3. เปิดน้ำเข้าสู่เครื่องซักผ้า
4. กดปุ่ม **Start/Pause (เริ่ม/พัก)**

การทำงานนี้จะทิ้งน้ำที่หลงเหลืออยู่จากการทดสอบเครื่องของผู้ผลิต

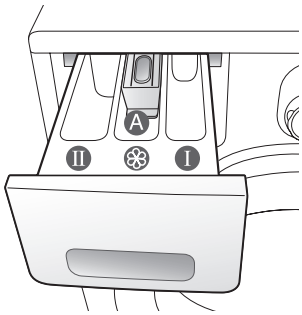

ช่องใส่ Ⅰ : ผงซักฟอกสำหรับการแช่หรือการลงแป้ง

ช่องใส่ Ⅱ : ผงซักฟอกสำหรับการซัก น้ำยาปรับสภาพน้ำ สารแช่ผ้า สารฟอกขาว และสารขจัดคราบ

ช่องใส่ ❀ : สารเพิ่มเติม เช่น น้ำยาปรับผ้านุ่มหรือน้ำยารักษาเนื้อผ้า (ห้ามเติมเกินกว่าขอบด้านล่าง (สูงสุด) ของ “A”)

คำแนะนำเบื้องต้น

1. ใส่ผ้าในเครื่องซักผ้า

คำเตือน ห้ามใส่ผ้าเกินปริมาณที่กำหนด ถ้าต้องการทราบระดับความจุสำหรับผ้าแต่ละชนิด โปรดดูแผนผังในหน้า 24

- ตรวจสอบว่าผ้าไม่ติดกับประตู เนื่องจากจะทำให้น้ำรั่ว
- ผงซักฟอกอาจตกค้างอยู่ที่ส่วนของยางในเครื่องซักผ้าหลังจากรอบการซัก โปรดล้างผงซักฟอกที่หลงเหลือออก เนื่องจากอาจทำให้น้ำรั่วได้
- ห้ามซักผ้าหรือสิ่งที่กันน้ำผ่านได้

2. ปิดประตูให้สลักล็อคเข้าที่
3. เปิดเครื่อง
4. เติมผงซักฟอกและสารเพิ่มเติมในช่องเติม
5. เลือกโปรแกรมซักและตัวเลือกการซักที่เหมาะสม
   ไฟสัญญาณการซักจะสว่าง และเวลาในการซักโดยประมาณจะปรากฏในจอแสดงผล
6. กดปุ่ม **Start/Pause (เริ่ม/พัก)**

WF8800RS-02591S_TH.indd 17 9/18/2008 8:34:26 PM

การซักผ้า

การใช้แผงควบคุม

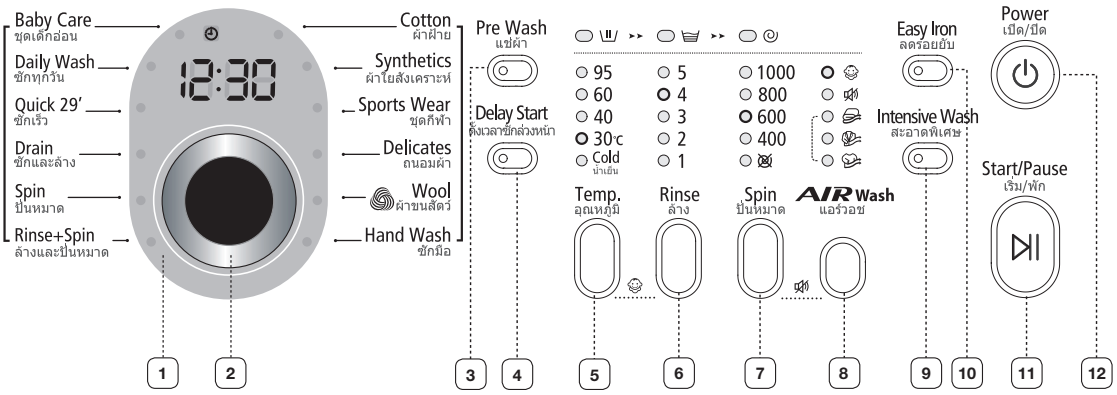

1 จอแสดงผลดิจิตัล	แสดงเวลาของรอบการซักที่เหลือ ข้อมูลการซัก และข้อความแสดงข้อผิดพลาด
2 ปุ่มเลือกโปรแกรมซัก	เลือกรูปแบบการหมุนของถังซักและความเร็วการปั่นหมาดสำหรับรอบการซัก สำหรับข้อมูลโดยละเอียด โปรดดูที่ "การซักผ้าโดยใช้ปุ่มเลือกโปรแกรมซัก (ดูที่หน้า 22)" **Cotton (ผ้าฝ้าย)** -สำหรับผ้าฝ้ายทั่วไปหรือสกปรกน้อย ผ้าปูที่นอน ผ้าปูโต๊ะ ชุดชั้นใน ผ้าเช็ดตัว เชิ้ต ฯลฯ **Synthetics (ผ้าใยสังเคราะห์)** - สำหรับเสื้อ เสื้อเชิ้ต ฯลฯ ที่เปื้อนปานกลางถึงเล็กน้อย ทำจากโพลีเอสเตอร์ (ไดโอเลน, เทรวิรา) โพลีอาไมด์ (เพอร์ลอน ไนลอน) หรือส่วนผสมอื่นๆ **Sports Wear (ชุดกีฬา)** - ใช้สำหรับเนื้อผ้าที่กันน้ำหรือผ้ามันเพื่อรักษาสภาพเนื้อหาให้ดีเช่นเดิมและให้ความรู้สึกสดชื่น **Delicates (ผ้าบาง)** - สำหรับผ้าเนื้อบาง ชุดชั้นในสตรี ชุดชั้นใน ชุดกระโปรง เสื้อเชิ้ต และเสื้อเพื่อให้ได้ผลลัพธ์ที่ดียิ่งขึ้น โปรดใช้ผงซักฟอกแบบน้ำ **Wool (ขนสัตว์)** - เฉพาะสำหรับขนสัตว์ที่ซักด้วยเครื่องได้ น้ำหนักควรน้อยกว่า 2.0 กิโลกรัม รอบ การซักผ้าขนสัตว์ของเครื่องนี้ได้รับการรับรองโดย Woolmark สำหรับการซักผลิตภัณฑ์ Woolmark ที่ซักด้วยเครื่องได้ และมีการซักตามคำแนะนำที่ฉลากของผ้า และที่ผู้ผลิตเครื่องซักผ้าระบุ M0509 (หมายเลขใบรับรองจาก IWS NOM INEE Co., Ltd.) **Handwash (ซักด้วยมือ)** - รอบการซักที่เบามากซึ่งอ่อนโยนเหมือนกับซักด้วยมือ **Baby Care (เสื้อผ้าเด็ก)** - การซักด้วยอุณหภูมิสูง และล้างน้ำมากเป็นพิเศษ เพื่อให้มั่นใจว่าจะไม่มีผงซักฟอกหลงเหลืออยู่บนเสื้อผ้า **Daily Wash (ซักทุกวัน)** - ใช้สำหรับเสื้อผ้าที่ใช้ทุกวัน เช่น ชุดชั้นในและเสื้อเชิ้ต **Quick 29' (ซักเร็ว 29 นาที)** - สำหรับผ้าที่เปื้อนน้อยซึ่งคุณต้องการความรวดเร็วในการซัก **Drain (ทิ้งน้ำ)** - ทิ้งน้ำออกจากเครื่องซักผ้าโดยไม่มีการปั่น **Spin (ปั่นหมาด)** - ปั่นหมาดเพิ่มเพื่อเอาน้ำออกจากผ้ามากขึ้น **Rinse + Spin (ล้าง + ปั่นหมาด)** - ใช้สำหรับผ้าที่ต้องการล้างเท่านั้น หรือเติมน้ำยาปรับผ้านุ่มที่เติมระหว่างการล้างผ้า
3 ปุ่มเลือก Prewash (แช่ผ้า)	กดปุ่มนี้เพื่อเลือกแช่ผ้าก่อนซัก การแช่ผ้าก่อนซักสามารถใช้ได้กับ: Cotton (ผ้าฝ้าย) Synthetics (ผ้าใยสังเคราะห์) Sports Wear (ชุดกีฬา) Baby Care (เสื้อผ้าเด็ก) Daily Wash (ซักทุกวัน)

WF8800RS-02591S_TH.indd 18 9/18/2008 8:34:26 PM

4 **ปุ่มเลือก Delay start (ตั้งเวลาล่วงหน้า)**	กดปุ่มนี้ซ้ำๆ เพื่อเลือกตัวเลือกการตั้งเวลาล่วงหน้า (ตั้งแต่ 3 ชั่วโมงถึง 19 ชั่วโมง โดยเพิ่มได้ครั้งละหนึ่งชั่วโมง) จำนวนชั่วโมงที่แสดงนั้นเป็นเวลาที่รอบการซักจะสิ้นสุดลง
5 **ปุ่มเลือกอุณหภูมิ**	กดปุ่มนี้ซ้ำๆ เพื่อเลือกตัวเลือกอุณหภูมิของน้ำ: (น้ำเย็น, 30 °C, 40 °C, 60 °C และ 95 °C)
6 **ปุ่มเลือก RINSE (ล้างน้ำ)**	กดปุ่มนี้เพื่อเพิ่มรอบการล้างน้ำ จำนวนสูงสุดของรอบการล้างน้ำก็คือห้ารอบ
7 **ปุ่มเลือก SPIN (ปั่นหมาด)**	กดปุ่มนี้ซ้ำๆ เพื่อเลือกตัวเลือกความเร็วในการปั่นหมาด WF8804 / WF8704 : , , 400, 800, 1200, 1400 รอบต่อนาที WF8802 / WF8702 : , , 400, 800, 1000, 1200 รอบต่อนาที WF8800 / WF8700 : , , 400, 600, 800, 1000 รอบต่อนาที "**ไม่ปั่นหมาด** " - ผ้าจะอยู่ในถังและไม่มีการปั่นหมาดหลังจากการระบายน้ำครั้งสุดท้าย "**หยุดการล้างน้ำ** " - ผ้าจะแช่ล้างน้ำสุดท้าย ก่อนที่จะนำผ้าออกจากเครื่องจะต้องมีการใช้โปรแกรม Drain (ทิ้งน้ำ) หรือ Spin (ปั่น) ก่อน
8 **ปุ่มเลือก AIR WASH (แอร์วอช)**	กดปุ่มนี้เพื่อเพิ่มความสดชื่นให้กับเสื้อผ้าและสิ่งของที่ใช้เป็นประจำทุกวัน รอบ Air Wash (แอร์วอช) จะเพิ่มความสดชื่นให้กับเสื้อผ้าโดยไม่ต้องใช้น้ำ และทำให้เสื้อผ้าพร้อมสวมใส่อีกครั้ง "**เสื้อถักไหมพรม** "- เพิ่มความสดชื่นให้เสื้อถักไหมพรม เช่น เสื้อกันหนาว รวมถึงเสื้อเชิ้ตและเสื้อ ซึ่งใช้เวลาเพียง 30 นาที "**สูท** " -เพิ่มความสดชื่นให้สูทและเสื้อผ้าที่ใช้สำหรับธุรกิจ ซึ่งยังสามารถใช้ได้กับเสื้อแจ็คเก็ตและเสื้อโค้ทน้ำหนักเบาด้วยเช่นกัน "**ชุดเครื่องนอน** "- เพิ่มความสดชื่นและทำให้เครื่องนอนนุ่มขึ้น เช่น ผ้าห่มน้ำหนักเบา ผ้าปูที่นอนและหมอน
9 **ปุ่มเลือก INTENSIVE WASH (ซักมากเป็นพิเศษ)**	กดปุ่มนี้เมื่อผ้าเปื้อนมากและต้องการการซักล้างมากเป็นพิเศษ เวลาของรอบการซักจะเพิ่มขึ้นสำหรับแต่ละรอบ
10 **ปุ่มเลือก EASY IRON (รีดง่าย)**	กดปุ่มนี้เพื่อเตรียมเสื้อผ้าของคุณเพื่อให้รีดง่าย ด้วยการลดรอยยับระหว่างรอบการปั่นหมาด • สามารถใช้ระบบ Easy Iron (รีดง่าย) ได้เฉพาะในโปรแกรมการซักต่อไปนี้: Cotton (ผ้าฝ้าย) Synthetics (ผ้าใยสังเคราะห์) Sports Wear (ชุดกีฬา) Baby Care (เสื้อผ้าเด็ก) Daily Wash (ซักทุกวัน) • เมื่อเลือกระบบ Easy Iron (รีดง่าย) คุณสามารถตั้งค่าความเร็วรอบการปั่นหมาดได้จนถึง 800 รอบต่อนาที (หากคุณเลือกระบบ Easy Iron (รีดง่าย) ที่มีความเร็วรอบการปั่นหมาดสูงมากกว่า 800 รอบต่อนาที ความเร็วในการปั่นหมาดจะเปลี่ยนเป็น 800 รอบต่อนาทีโดยอัตโนมัติ)
11 **ปุ่มเลือก START/PAUSE (เริ่ม/พัก)**	กดปุ่มนี้เพื่อเริ่มต้นและหยุดโปรแกรมต่างๆ
12 **ปุ่ม POWER (เปิด/ปิด)**	กดปุ่มนี้หนึ่งครั้งเพื่อเปิดใช้เครื่องซักผ้า และกดอีกครั้งเพื่อปิดเครื่อง ถ้าเปิดเครื่องซักผ้าค้างไว้มากกว่า 10 นาทีโดยไม่มีการกดปุ่มใดๆ เครื่องจะปิดลงโดยอัตโนมัติ

WF8800RS-02591S_TH.indd 19 9/18/2008 8:34:27 PM

การซักผ้า

ล็อคป้องกันเด็ก

ฟังก์ชันล็อคป้องกันเด็กจะช่วยล็อคปุ่ม เพื่อป้องกันการเปลี่ยนรอบการซักที่คุณเลือกไว้

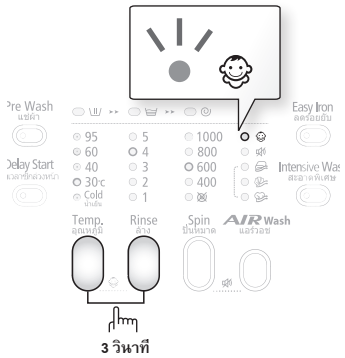

การเปิดใช้/การปิด

ถ้าคุณต้องการเปิดหรือปิดฟังก์ชันล็อคป้องกันเด็ก ให้กดปุ่ม **Temp. (อุณหภูมิ)** และ **Rinse (ล้างน้ำ)** พร้อมกันเป็นเวลา 3 วินาที "**ล็อคป้องกันเด็ก** " จะสว่างขึ้นบนแผงควบคุมเมื่อมีการเปิดใช้คุณลักษณะนี้

ขณะที่ใช้ฟังก์ชันล็อคป้องกันเด็ก จะมีเพียงปุ่ม **Power (เปิด/ปิด)** เท่านั้นที่ทำงาน ฟังก์ชันล็อคป้องกันเด็กจะทำงานแม้ว่าจะเปิดหรือปิดเครื่อง หรือหลังจากถอดปลั๊กและเสียบปลั๊กใหม่

ปิดเสียง

สามารถเลือกฟังก์ชันปิดเสียงได้กับทุกโปรแกรม เมื่อมีการเลือกฟังก์ชันนี้ เสียงจะถูกปิดสำหรับทุกโปรแกรม แม้ว่าจะเปิดหรือปิดเครื่องซ้ำๆ การตั้งค่านี้ก็ยังคงทำงานอยู่

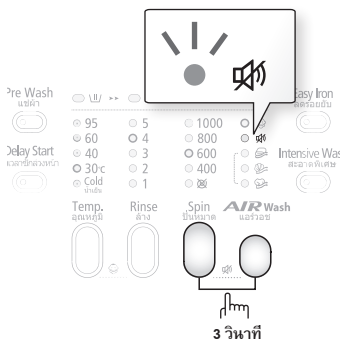

การเปิดใช้/การปิด

ถ้าคุณต้องการเปิดหรือปิดฟังก์ชันปิดเสียง ให้กดปุ่ม **Spin (ปั่นหมาด)** และ **Air Wash (แอร์วอช)** พร้อมกันเป็นเวลา 3 วินาที "**ปิดเสียง** " จะสว่างขึ้นบนแผงควบคุมเมื่อมีการเปิดใช้คุณลักษณะนี้

Delay start (ตั้งเวลาล่วงหน้า)

คุณสามารถกำหนดให้เครื่องซักผ้าทำงานเสร็จในภายหลังโดยอัตโนมัติ โดยเลือกได้ตั้งแต่ 3 ถึง 19 ชั่วโมง (เพิ่มได้ครั้งละ 1 ชั่วโมง) จำนวนชั่วโมงที่แสดงหมายถึงเวลาที่จะเสร็จสิ้นการซัก

1. กำหนดเครื่องซักผ้าด้วยตนเองหรือซักอัตโนมัติตามประเภทของผ้าที่ซัก
2. กดปุ่ม **Delay Start (ปุ่มตั้งเวลาล่วงหน้า)** ซ้ำๆ เพื่อตั้งเวลา
3. กดปุ่ม **Start/Pause (เริ่ม/พัก)** "**ปุ่มตั้งเวลาล่วงหน้า** " จะสว่างขึ้น และนาฬิกาจะเริ่มนับถอยหลังจนกว่าจะถึงเวลาที่ตั้งไว้
4. ในการยกเลิก Delay start (ปุ่มตั้งเวลาล่วงหน้า) ให้กดปุ่ม **Power (เปิด/ปิด)** จากนั้นเปิดเครื่องอีกครั้ง

WF8800RS-02591S_TH.indd 20 9/18/2008 8:34:28 PM

Air Wash (แอร์วอช)

ระบบ Air Wash (แอร์วอช) จะช่วยคืนความสดชื่นให้กับผ้าโดยไม่ต้องใช้น้ำ ด้วยระบบซักด้วยอากาศที่ทรงพลัง
สามารถใช้กับผ้าชนิดต่างๆ เช่น โค้ทขนสัตว์ ผ้าฝ้าย หรือเสื้อไหมพรมและสูท (ไม่เกินสองชิ้น (น้อยกว่า 1 กิโลกรัม)

1. เปิดประตู ใส่ผ้าในเครื่อง และปิดประตู
2. กดปุ่ม **Power (เปิด/ปิด)**
3. กดปุ่ม **Air Wash (แอร์วอช)**
   - แต่ละครั้งที่กดปุ่ม โหมดการทำงานจะเลือกโหมดตามลำดับต่อไปนี้: เสื้อถักไหมพรม → สูท → ชุดเครื่องนอน → เสื้อถักไหมพรม → ...

โหมด	เวลาของรอบ
ชุดเครื่องนอน	46 นาที
สูท	39 นาที
เสื้อถักไหมพรม	29 นาที

   - เมื่อมีการเลือกตัวเลือกใดตัวเลือกหนึ่ง ปุ่มอื่นๆ จะไม่สามารถใช้ได้ และคุณจะเลือกได้เฉพาะเวลาสำหรับการตั้งเวลาล่วงหน้าตั้งแต่ 3:00 - 19:00 ชั่วโมงเท่านั้น19:0019:00
4. ปิดประตูและกดปุ่ม **Start/Pause (เริ่ม/พัก)**

- เมื่อมีน้ำในถังซัก จะไม่สามารถเลือกปุ่ม **Air Wash (แอร์วอช)** ได้ ให้ทิ้งน้ำแล้วจึงเลือกปุ่ม **Air Wash (แอร์วอช)**
- กดปุ่ม **Start/Pause (เริ่ม/พัก)** หรือปุ่ม **Power (เปิด/ปิด)** เพื่อเอาผ้าออก
- สามารถใช้แผ่นหอมร่วมกับโปรแกรม Air Wash (แอร์วอช) เพื่อเพิ่มความหอมให้กับผ้า (หนึ่งแผ่นต่อผ้าหนึ่งหรือสองชิ้น)

หลีกเลี่ยงการใช้ Air Wash (แอร์วอช) กับผ้าต่อไปนี้:
- ผ้าที่มีความละเอียดอ่อน ทำจากหนัง มิงค์ ขนเฟอร์ ไหม ฯลฯ
- ชุดชั้นในที่มีลูกไม้ การบุที่ใช้ 'กาว' และชุดที่อาจมีเครื่องประดับหลุดร่วงได้
- ผ้าที่มีกระดุมอาจเสี่ยงต่อปัญหากระดุมแตก
- ผ้าที่ลงแป้งอาจเสียรูป
- ผ้าปูที่นอนที่แข็ง เช่น หมอนไม้ (ที่พักคอ)
  - หมอนหรือผ้าห่มที่มีพลาสติกหรือวัสดุอื่นที่ไม่ใช่ผ้าย
  - ผ้าห่มไฟฟ้า
- ผ้าห่มขนสัตว์
- ผ้าห่มนวม
- หมอนยาง

WF8800RS-02591S_TH.indd 21 9/18/2008 8:34:29 PM

การซักผ้า

การซักโดยใช้ปุ่มเลือกโปรแกรมซัก

เครื่องซักผ้าของคุณทำให้งานซักกลายเป็นเรื่องง่าย ด้วยระบบควบคุมอัตโนมัติ “ฟัซซี่คอนโทรล” ของ Samsung
เมื่อคุณเลือกโปรแกรมซัก เครื่องจะกำหนดอุณหภูมิ เวลาซัก และความเร็วในการซักให้

1. เปิดก๊อกน้ำที่อ่างซักล้าง
2. กดปุ่ม **Power (เปิด/ปิด)**
3. เปิดประตู
4. ใส่ผ้าครั้งละชิ้น โดยอย่าให้ผ้าพันกัน และอย่าใส่ผ้ามากเกินไป
5. ปิดประตู
6. เติมผงซักฟอก น้ำยาปรับผ้านุ่ม และน้ำยาแช่ผ้า (ถ้าจำเป็น) ในช่องที่เหมาะสม

Pre Wash (แช่ผ้า) จะใช้ได้เฉพาะเมื่อเลือกรอบการซักของ Cotton (ผ้าฝ้าย) Synthetics (ผ้าใยสังเคราะห์) Sports Wear (ชุดกีฬา) Baby Care (เสื้อผ้าเด็ก) Daily Wash (ซักทุกวัน) จำเป็นเฉพาะกรณีที่ผ้าเปื้อนมากเท่านั้น

7. ใช้ **ปุ่มเลือกโปรแกรมซัก** เพื่อเลือกโปรแกรมซักที่เหมาะกับชนิดของผ้า: Cotton (ผ้าฝ้าย) Synthetics (ผ้าใยสังเคราะห์) Sports Wear (ชุดกีฬา) Delicates (ผ้าบาง) Wool (ขนสัตว์) Hand Wash (ซักด้วยมือ) Baby Care (เสื้อผ้าเด็ก) Daily Wash (ซักทุกวัน) Quick 29' (ซักเร็ว 29 นาที) สัญญาณที่เกี่ยวข้องจะสว่างในแผงควบคุม
8. ในขั้นตอนนี้ คุณจะสามารถควบคุมอุณหภูมิการซัก ปริมาณการล้างน้ำ ความเร็วในการปั่น ตั้งเวลาซัก โดยกดปุ่มตัวเลือกที่ต้องการ
9. กดปุ่ม **Start/Pause (เริ่ม/พัก)** และการซักจะเริ่มต้นขึ้น สัญลักษณ์ของขั้นตอนการซักจะสว่างขึ้น และเวลาที่เหลือของรอบการซักจะปรากฏในจอแสดงผล

ตัวเลือกการหยุด

ภายใน 5 นาทีนับจากเริ่มต้นการซัก คุณยังสามารถเพิ่มหรือนำผ้าออกได้

1. กดปุ่ม **Start/Pause (เริ่ม/พัก)** เพื่อปลดล็อคประตู

คุณจะไม่สามารถเปิดประตูได้อีก เมื่อน้ำร้อนเกินไป หรือระดับน้ำสูงเกินไป

2. หลังจากปิดประตู ให้กดปุ่ม **Start/Pause (เริ่ม/พัก)** เพื่อเริ่มต้นการซักอีกครั้ง

เมื่อสิ้นสุดรอบการซัก:

เมื่อสิ้นสุดรอบการซักทั้งหมด เครื่องจะปิดเองโดยอัตโนมัติ

1. เปิดประตู
2. นำผ้าออกจากเครื่อง

WF8800RS-02591S_TH.indd 22 9/18/2008 8:34:29 PM

การซักด้วยตนเอง

คุณสามารถซักผ้าด้วยตนเองโดยไม่ใช้ปุ่มเลือกโปรแกรมซักได้

1. เปิดท่อจ่ายน้ำ
2. กดปุ่ม **Power (เปิด/ปิด)** ที่เครื่องซักผ้า
3. เปิดประตู
4. ใส่ผ้าครั้งละชิ้น โดยอย่าให้ผ้าพันกัน และอย่าใส่ผ้ามากเกินไป
5. ปิดประตู
6. ใส่ผงซักฟอก และถ้าจำเป็น ใส่น้ำยาปรับผ้านุ่ม น้ำยาแช่ผ้าก่อนซักในช่องที่เหมาะสม
7. กดปุ่ม **Temp. (อุณหภูมิ)** เพื่อเลือกอุณหภูมิ (น้ำเย็น 30 °C, 40 °C, 60 °C, 95 °C)
8. กดปุ่ม **Rinse (ล้างน้ำ)** เพื่อเลือกจำนวนรอบการล้างที่ต้องการ
   จำนวนรอบการล้างสูงสุดคือห้ารอบ
   ระยะเวลาการซักจะเพิ่มขึ้นตามที่กำหนด
9. กดปุ่ม **Spin (ปั่นหมาด)** เพื่อเลือกความเร็วในการปั่น
   โปรแกรมหยุดการล้างน้ำจะช่วยให้คุณนำผ้าที่ไม่แห้งหมาดออกจากเครื่องได้ (⊗ : ไม่ปั่นหมาด ⎽⎽/ : หยุดการล้างน้ำ)
10. กดปุ่ม **Delay start (ตั้งเวลาล่วงหน้า)** ซ้ำๆ เพื่อเลือกตัวเลือกการตั้งเวลาล่วงหน้าที่ต้องการ (ตั้งแต่ 3 ถึง 19 ชั่วโมง โดยเพิ่มได้ครั้งละหนึ่งชั่วโมง) เวลาจะปรากฏเพื่อแสดงเวลาที่การซักสิ้นสุดลง
11. กดปุ่ม **Start/Pause (เริ่ม/พัก)** และเครื่องจะเริ่มต้นการซัก

WF8800RS-02591S_TH.indd 23 9/18/2008 8:34:29 PM

การซักผ้า

คำแนะนำของผ้า

ทำตามคำแนะนำง่ายๆ เพื่อให้ได้ผ้าสะอาด และการซักที่มีประสิทธิภาพ

ตรวจสอบฉลากการดูแลผ้าเสมอก่อนที่จะซัก

แยกผ้าตามประเภทของเนื้อผ้า ดังนี้:

- ฉลากการดูแล: แยกผ้าเป็น ผ้าฝ้าย ผ้าเนื้อผสม ผ้าสังเคราะห์ ผ้าไหม ผ้าขนสัตว์ และเรยอน
- ผ้าสี: แยกผ้าเป็นผ้าสีและผ้าขาว โปรดซักผ้าใหม่ที่เป็นผ้าสีแยกต่างหาก
- ขนาด: การใส่ผ้าขนาดต่างๆ กันในการซักจะทำให้การซักมีประสิทธิภาพดีขึ้น
- ความละเอียดอ่อน: ซักผ้าบางแยกต่างหาก ใช้โปรแกรมซัก Delicate (ผ้าบาง) สำหรับผ้าขนสัตว์ใหม่ ผ้าม่าน และผ้าไหม ตรวจสอบป้ายของผ้าที่ซัก หรือดูผังการดูแลผ้าในภาคผนวก

นำสิ่งของออกจากกระเป๋า

ก่อนการซักแต่ละครั้ง ให้นำสิ่งของออกจากประเป๋าของผ้าก่อน ของแข็งขนาดเล็กที่มีรูปร่างต่างๆ เล่น เหรียญ มีด เข็มหมุด และคลิปหนีบกระดาษอาจทำให้เครื่องซักผ้าเสียหาย ห้ามซักผ้าที่มีหัวเข็มขัด กระดุม หรือโลหะหนักติดอยู่
โลหะที่อยู่บนผ้าอาจทำให้ผ้าและถังซักเสียหาย ให้กลับข้างผ้าที่มีกระดุมและลายปักก่อนที่จะซัก ถ้าซิปกางเกงหรือแจ็คเก็ตเปิดอยู่ระหว่างการซัก อาจทำให้ถังปั่นหมาดเสียหาย โปรดรูปซิปและยึดด้วยเส้นด้ายก่อนการซัก
เสื้อผ้าที่มีเชือกยาวอาจพันกับผ้าชิ้นอื่น และอาจทำให้ผ้าเสียหาย โปรดมัดเชือกไว้ก่อนที่จะซัก

การแช่ผ้าฝ้าย

เครื่องซักผ้าของคุณ เมื่อใช้ร่วมกับผงซักฟอกชนิดใหม่ๆ จะสามารถให้ผลการซักที่ดีเยี่ยม พร้อมทั้งประหยัดพลังงาน เวลา น้ำและผงซักฟอก แต่หากผ้าฝ้ายสกปรกมาก คุณสามารถใช้การแช่ผ้ากับผงซักฟอกชนิดโปรตีน

การพิจารณาปริมาณผ้าที่จะซัก

โปรดอย่าใส่ผ้ามากเกินไปในเครื่อง เนื่องจากจะทำให้ผ้าไม่สะอาด โปรดใช้ผังด้านล่างนี้เพื่อพิจารณาปริมาณผ้าที่จะซัก สำหรับประเภทของเนื้อผ้าที่ซัก

ประเภทของผ้า	ปริมาณผ้า	
รุ่น	WF8804/ WF8802/ WF8800	WF8704/ WF8702/ WF8700
Cotton (ผ้าฝ้าย) **-เปื้อนปานกลาง/น้อย** **- เปื้อนมาก**	8.0 กิโลกรัม	7.0 กิโลกรัม
Synthetics (ผ้าใยสังเคราะห์)	3.0 กิโลกรัม	3.0 กิโลกรัม
Sports Wear (ชุดกีฬา)	2.5 กิโลกรัม	2.5 กิโลกรัม
Delicates (ผ้าบาง)	2.5 กิโลกรัม	2.5 กิโลกรัม
Wool (ขนสัตว์)	2.0 กิโลกรัม	2.0 กิโลกรัม

- เมื่อผ้าไม่สมดุล (“**UE**” สว่างในจอแสดงผล) ให้กระจายชิ้นผ้าให้เสมอกัน
  ถ้าผ้าไม่สมดุล ประสิทธิภาพในการปั่นหมาดจะลดลง
- เมื่อซักชุดเครื่องนอนหรือผ้านวม เวลาในการซักอาจนานขึ้น และประสิทธิภาพในการปั่นหมาดจะลดลง
- สำหรับชุดเครื่องนอนหรือผ้านวม น้ำหนักที่แนะนำคือ 1.8 (กิโลกรัม) หรือน้อยกว่า

WF8800RS-02591S_TH.indd 24 9/18/2008 8:34:29 PM

โปรดใส่ชุดชั้นในสตรี (ซักน้ำได้) ลงในถุงใส่ผ้าสำหรับซัก (ต้องซื้อเพิ่ม)

- ส่วนที่เป็นเหล็กของชุดชั้นในสตรีอาจทำให้วัสดุแตกหักและทำความเสียหายแก่เสื้อผ้าได้ ดังนั้นโปรดใส่ชุดชั้นในลงในถุงใส่ผ้าสำหรับซัก
- เสื้อผ้าชิ้นเล็กและมีน้ำหนักเบา เช่น ถุงเท้า ถุงมือ ถุงน่อง และผ้าเช็ดหน้า อาจติดอยู่บริเวณประตู โปรดใส่เสื้อผ้าเหล่านี้ไว้ในถุงใส่ผ้าสำหรับซัก

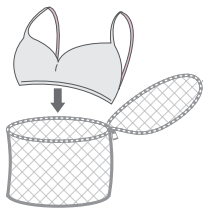

ข้อควรระวัง โปรดอย่าซักถุงใส่ผ้าสำหรับซักเองโดยไม่มีเสื้อผ้าอื่นๆ เนื่องจากอาจทำให้เกิดการสั่นสะเทือนที่ทำให้เครื่องซักผ้าเคลื่อนที่ และอาจทำให้เกิดอุบัติเหตุจนได้รับบาดเจ็บ

ข้อมูลผงซักฟอกและสารเพิ่มเติมต่าง ๆ

ควรใช้ผงซักฟอกแบบใด

ประเภทของผงซักฟอกที่จะใช้นั้นขึ้นอยู่กับเนื้อผ้า (ผ้าฝ้าย ผ้าสังเคราะห์ ผ้าบาง ขนสัตว์) สี อุณหภูมิที่ซัก ระดับความสกปรก โปรดใช้ผงซักฟอกชนิด “ฟองน้อย” ที่ผลิตขึ้นสำหรับเครื่องซักผ้าอัตโนมัติโดยเฉพาะ

ปฏิบัติตามคำแนะนำของผู้ผลิตผงซักฟอก ตามน้ำหนักของผ้า ความสกปรก และความกระด้างของน้ำ หากคุณไม่ทราบว่าน้ำที่ใช้กระด้างมากเพียงใด โปรดติดต่อผู้ให้บริการน้ำประปาในพื้นที่

ห้ามใช้ผงซักฟอกที่เกาะตัวหรือแข็ง เนื่องจากผงซักฟอกอาจค้างอยู่ในรอบการซัก และทำให้เครื่องซักผ้าไม่สามารถล้างน้ำให้สะอาด และทำให้ช่องระบายน้ำล้นอุดตัน

ช่องใส่ผงซักฟอก

เครื่องซักผ้าของคุณมีช่องแยกสำหรับจ่ายผงซักฟอกและน้ำยาปรับผ้านุ่ม เติมสารเพิ่มเติมในช่องที่ถูกต้องก่อนที่จะเริ่มต้นเครื่องซักผ้า

ห้ามเปิดช่องใส่ผงซักฟอกขณะที่เครื่องทำงาน

1. ดึงช่องใส่ผงซักฟอกทางซ้ายของแผงควบคุมออก
2. เติมผงซักฟอกตามปริมาณที่แนะนำ ในช่องใส่ผงซักฟอก Ⅱ ก่อนที่จะเริ่มต้นใช้เครื่องซักผ้า
3. เติมน้ำยาปรับผ้านุ่มตามปริมาณที่แนะนำในช่องสำหรับใส่น้ำยาปรับผ้านุ่ม ❀ ถ้าต้องการ
4. เมื่อใช้ตัวเลือกการแช่ผ้า ให้เพิ่มผงซักฟอกในปริมาณที่แนะนำในช่องสำหรับแช่ผ้า Ⅰ

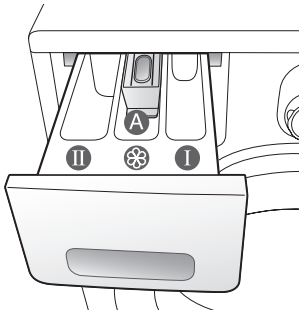

เมื่อซักผ้าชิ้นใหญ่ โปรดอย่าใช้ผงซักฟอกประเภทต่อไปนี้

- ผงซักฟอกชนิดเม็ดและแคปซูล
- ผงซักฟอกที่ใช้บอลและตาข่าย

น้ำยาปรับผ้านุ่มชนิดเข้มข้นจะต้องมีการเจือจางด้วยน้ำสะอาด ก่อนที่จะเทลงในช่องใส่ (เพื่อไม่ให้ช่องทางไหลอุดตัน)

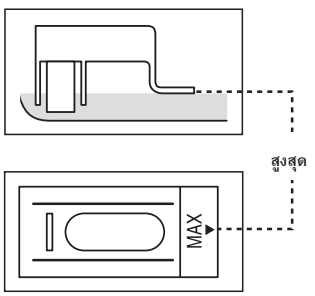

WF8800RS-02591S_TH.indd 25 9/18/2008 8:34:29 PM

การทำความสะอาดและดูแลรักษาเครื่องซักผ้า

การรักษาความสะอาดของเครื่องซักผ้าจะช่วยเพิ่มประสิทธิภาพของเครื่อง หลีกเลี่ยงการซ่อมบำรุงที่ไม่จำเป็น และยืดอายุการใช้งาน

การทิ้งน้ำเมื่อเกิดเหตุฉุกเฉิน

1. ถอดปลั๊กของเครื่องซักผ้า
2. เปิดฝาตัวกรองโดยใช้เหรียญหรือกุญแจ

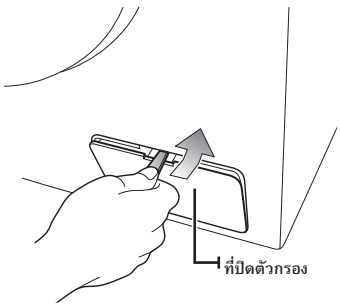

3. ไขสกรูของท่อน้ำทิ้งฉุกเฉิน โดยหมุนไปทางซ้าย

4. ยึดฝาที่ปลายของท่อน้ำทิ้งฉุกเฉิน และค่อยๆ ดึงออกมาประมาณ 15 ซม.
5. ปล่อยให้น้ำไหลลงในอ่าง
6. สอดท่อเข้าที่ และไขฝาปิดเข้าที่
7. ปิดฝาครอบของตัวกรอง

การทำความสะอาดภายนอก

1. เช็ดผิวด้านนอกของเครื่องซักผ้า รวมถึงแผงควบคุม ด้วยผ้านุ่มและผงซักฟอกที่ไม่มีสารขัดถู
2. ใช้ผ้านุ่มเช็ดให้แห้ง
3. ห้ามเทน้ำบนเครื่องซักผ้า

WF8800RS-02591S_TH.indd 26 9/18/2008 8:34:30 PM

การทำความสะอาดช่องใส่และที่พักผงซักฟอก

1. กดสลักคลายที่ด้านในของที่ใส่ผงซักฟอก และดึงออก
2. ถอดที่แบ่งน้ำยาซักผ้าชนิดเหลวออกจากช่องใส่ผงซักฟอก

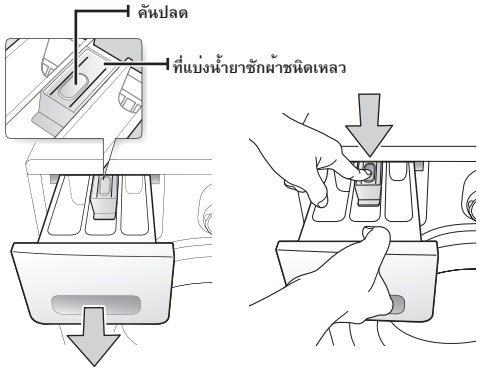

3. ล้างทุกส่วนด้วยน้ำสะอาดที่ไหล

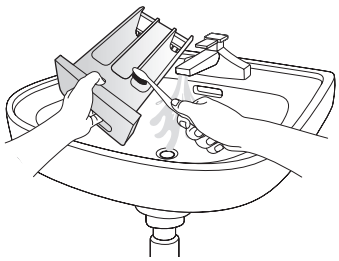

4. ล้างที่พักผงซักฟอกด้วยแปรงสีฟันเก่า
5. ใส่ที่แบ่งน้ำยาซักฟ้าชนิดเหลวด้วยการดันเข้าที่ให้แน่น
6. ดันช่องใส่เข้าที่
7. ถ้าต้องการขจัดผงซักฟอกที่หลงเหลือ ให้ใช้โปรแกรมล้างน้ำโดยไม่ต้องมีผ้าในถัง

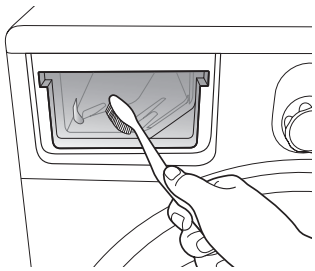

การทำความสะอาดตัวกรองเศษผ้า

เราขอแนะนำให้ทำความสะอาดตัวกรองเศษผ้า 5 หรือ 6 ครั้งต่อปี หรือเมื่อข้อความ "**5E**" ปรากฏ (โปรดดูที่ "การทิ้งน้ำเมื่อเกิดเหตุฉุกเฉิน" ในหน้าก่อน)

1. เปิดฝาตัวกรองโดยใช้เหรียญหรือกุญแจ
2. ไขสกรูของท่อน้ำทิ้งฉุกเฉิน โดยหมุนไปทางซ้าย เพื่อทิ้งน้ำให้หมด
3. ไขตัวกรองเศษผ้าออก

4. ล้างเศษฝุ่นละอองหรือวัสดุอื่นออกจากตัวกรองเศษผ้า ตรวจสอบว่าใบพัดของปั๊มน้ำทิ้งที่ด้านหลังของตัวกรองเศษผ้าไม่อุดตัน
5. ปิดฝาของตัวกรองเศษผ้า
6. ปิดฝาครอบของตัวกรอง

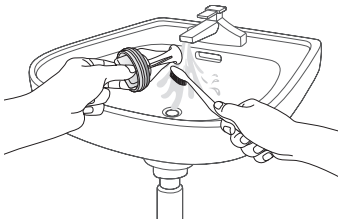

WF8800RS-02591S_TH.indd 27 9/18/2008 8:34:31 PM

การทำความสะอาดและดูแลรักษาเครื่องซักผ้า

การทำความสะอาดตัวกรองท่อจ่ายน้ำ

คุณควรทำความสะอาดตัวกรองของท่อจ่ายน้ำอย่างน้อยปีละครั้ง หรือเมื่อมีข้อความ "**4E**" ปรากฏขึ้น:

1. ปิดน้ำที่จ่ายเข้าสู่เครื่องซักผ้า
2. ไขท่อออกจากด้านหลังของเครื่อง เพื่อป้องกันไม่ให้น้ำไหลออกเนื่องจากแรงดันอากาศในท่อ ให้ใช้ผ้าปิดปลายท่อไว้
3. ค่อยๆ ใช้คีมจับตะแกรงตัวกรองออกจากปลายของท่อ และล้างด้วยน้ำสะอาด นอกจากนี้ ให้ทำความสะอาดด้านนอกและด้านในของข้อต่อที่เป็นเกลียวด้วย
4. ดันตัวกรองเข้าที่
5. ไขท่อเข้ากับเครื่องซักผ้าดังเดิม
6. ตรวจสอบว่าไม่มีน้ำรั่วและเปิดก๊อก

การซ่อมแซมเครื่องซักผ้าหากน้ำแข็งตัว

หากอุณหภูมิต่ำกว่าจุดเยือกแข็ง และน้ำในเครื่องซักผ้ากลายเป็นน้ำแข็ง ให้ทำดังนี้

1. ถอดปลั๊กของเครื่องซักผ้า
2. เทน้ำอุ่นที่ก๊อกจ่ายน้ำ เพื่อให้ท่อจ่ายน้ำหลวม
3. ถอดท่อจ่ายน้ำ และแช่ในน้ำอุ่น
4. เทน้ำอุ่นในถังซักของเครื่องซักผ้า และทิ้งไว้ประมาณ 10 นาที
5. ต่อท่อจ่ายน้ำเข้าที่ และตรวจสอบว่าการจ่ายน้ำและการทิ้งน้ำเป็นปกติ

การจัดเก็บเครื่องซักผ้า

ถ้าคุณจำเป็นต้องจัดเก็บเครื่องซักผ้าเป็นเวลานาน คุณควรระบายน้ำออกและถอดปลั๊ก เครื่องซักผ้าอาจได้รับความเสียหายถ้ามีน้ำค้างอยู่ในท่อและองค์ประกอบภายในก่อนจัดเก็บ

1. เลือกโปรแกรม Quick 29' (ซักเร็ว 29 นาที) และเติมสารฟอกในช่องสารฟอก ให้เครื่องซักผ้าทำงานโดยไม่ต้องใส่ผ้า
2. ปิดก๊อกน้ำและถอดท่อจ่ายน้ำ
3. ถอดปลั๊กเครื่องซักผ้าจากเต้าเสียบไฟฟ้า และเปิดประตูเครื่องทิ้งไว้เพื่อให้อากาศหมุนเวียน

ถ้าเครื่องซักผ้าของคุณมีการจัดเก็บในอุณหภูมิต่ำกว่าจุดเยือกแข็ง โปรดรอให้น้ำที่ตกค้างในเครื่องละลายก่อนที่จะใช้งานอีกครั้ง

WF8800RS-02591S_TH.indd 28 9/18/2008 8:34:31 PM

การแก้ไขปัญหาและรหัสข้อมูล

ตรวจสอบสิ่งต่อไปนี้ถ้าเครื่องซักผ้าของคุณ...

ปัญหา	การแก้ไข
ไม่ทำงาน	• ตรวจสอบว่าเครื่องซักผ้าเสียบปลั๊กเรียบร้อย • ตรวจสอบว่าประตูปิดสนิท • ตรวจสอบว่าก๊อกจ่ายน้ำเปิดอยู่ • ตรวจสอบว่าได้กดปุ่ม Start/Pause (เริ่ม/พัก) แล้ว
ไม่มีน้ำหรือน้ำไม่เพียงพอ	• เปิดก๊อกน้ำจนสุด • ตรวจสอบว่าท่อจ่ายน้ำไม่จับตัวเป็นน้ำแข็ง • ยืดให้ท่อจ่ายน้ำตรง • ทำความสะอาดตัวกรองที่ท่อจ่ายน้ำ
มีผงซักฟอกหลงเหลือในช่องใส่หลังจากการซัก	• ตรวจสอบว่าเครื่องซักผ้าต่อกับแหล่งจ่ายน้ำที่มีแรงดันเพียงพอ • ตรวจสอบว่าได้เติมผงซักฟอกในช่องกลางของที่ใส่
สั่นสะเทือนหรือมีเสียงดัง	• ตรวจสอบว่าเครื่องตั้งอยู่บนพื้นที่ซึ่งราบเสมอกัน หากพื้นที่ไม่ราบเสมอกัน ให้ปรับขาตั้งของเครื่องให้ได้ระดับ • ตรวจสอบว่านำหมุดสำหรับการขนส่งออกแล้ว • ตรวจสอบว่าเครื่องซักผ้าไม่ได้สัมผัสกับวัตถุอื่น • ตรวจสอบว่าปริมาณผ้าอยู่ในถังอย่างสมดุล
เครื่องซักผ้าไม่ทิ้งน้ำและ/หรือปั่นหมาด	• การวางตำแหน่งของท่อน้ำทิ้ง อย่าให้ท่อบิดงอ • ตรวจสอบว่าตัวกรองเศษผ้าไม่อุดตัน
ประตูล็อคและไม่สามารถเปิดได้	• ฝาเครื่องจะไม่สามารถเปิดได้จนกว่าจะครบ 3 นาทีหลังจากที่เครื่องหยุดการทำงานหรือมีการปิดเครื่อง

ถ้าปัญหาเหล่านี้ยังคงอยู่ โปรดติดต่อศูนย์บริการลูกค้าของ Samsung ใกล้บ้าน

WF8800RS-02591S_TH.indd 29 9/18/2008 8:34:31 PM

การแก้ไขปัญหาและรหัสข้อมูล

รหัสข้อมูล

เมื่อเครื่องซักผ้าทำงานผิดปกติ คุณอาจพบรหัสข้อมูลในจอแสดงผล ในกรณีนี้ ให้ตรวจสอบตารางต่อไปนี้และลองใช้วิธีแก้ไขที่แนะนำก่อนที่จะติดต่อฝ่ายบริการลูกค้า

สัญลักษณ์ของรหัส	การแก้ไข
dE	• ปิดประตู
4E	• ตรวจสอบว่าก๊อกจ่ายน้ำเปิดอยู่ • ตรวจสอบแรงดันน้ำ
5E	• ทำความสะอาดตัวกรองเศษผ้า • ตรวจสอบว่าได้ติดตั้งท่อน้ำทิ้งไว้อย่างถูกต้อง
UE	• ผ้าไม่สมดุล ให้คลายผ้าที่พันกันออก หากมีการซักผ้าเพียงชิ้นเดียว เช่น เสื้อคลุมอาบน้ำหรือกางเกงยีนส์ การปั่นหมาดครั้งสุดท้ายอาจไม่ได้ผลดีเท่าที่ควร และข้อความแสดงข้อผิดพลาด “UE” จะปรากฏในจอแสดงผล
cE/3E	• ติดต่อฝ่ายบริการหลังการขาย

สำหรับรหัสที่ไม่ปรากฏข้างต้น หรือถ้าคำแนะนำใช้ไม่ได้ผล โปรดติดต่อศูนย์บริการของ Samsung หรือตัวแทนจำหน่าย Samsung ใกล้บ้าน

WF8800RS-02591S_TH.indd 30 9/18/2008 8:34:31 PM

ผังโปรแกรม

ผังโปรแกรม

(● ตัวเลือกสำหรับผู้ใช้)

โปรแกรม	น้ำหนักสูงสุด (กิโลกรัม)		ผงซักฟอก			อุณหภูมิสูงสุด (°C)
	WF8804/ WF8802/ WF8800	WF8704/ WF8702/ WF8700	แช่ผ้า	ซัก	น้ำยาปรับผ้านุ่ม	
Cotton (ผ้าฝ้าย)	8.0	7.0	●	ใช่	●	95
Synthetics (ผ้าใยสังเคราะห์)	3.0	3.0	●	ใช่	●	60
Sports Wear (ชุดกีฬา)	2.5	2.5	●	ใช่	●	60
Delicates (ผ้าบาง)	2.5	2.5	-	ใช่	-	40
Wool (ขนสัตว์)	2.0	2.0	-	ใช่	-	40
Handwash (ซักด้วยมือ)	2.0	2.0	-	ใช่	●	40
Baby Care (เสื้อผ้าเด็ก)	4.0	3.0	●	ใช่	●	95
Daily Wash (ซักทุกวัน)	4.0	3.0	●	ใช่	●	60
Quick 29' (ซักเร็ว 29 นาที)	3.0	3.0	-	ใช่	●	60

โปรแกรม	ความเร็วในการปั่น (สูงสุด) รอบต่อนาที			Delay start (ตั้งเวลาล่วงหน้า)	เวลาของรอบ (นาที)
	WF8804/ WF8704	WF8802/ WF8702	WF8800/ WF8700		
Cotton (ผ้าฝ้าย)	1400	1200	1000	●	120
Synthetics (ผ้าใยสังเคราะห์)	1200	1200	1000	●	84
Sports Wear (ชุดกีฬา)	1200	1200	1000	●	65
Delicates (ผ้าบาง)	800	800	800	●	45
Wool (ขนสัตว์)	800	800	800	●	37
Handwash (ซักด้วยมือ)	400	400	400	●	30
Baby Care (เสื้อผ้าเด็ก)	1400	1200	1000	●	129
Daily Wash (ซักทุกวัน)	1200	1200	1000	●	65
Quick 29' (ซักเร็ว 29 นาที)	1400	1200	1000	●	29

1. โปรแกรมที่มีการแช่ผ้าจะใช้เวลานานขึ้นประมาณ 15 นาที
2. ข้อมูลระยะเวลาของโปรแกรมได้รับการวัดตามเงื่อนไขที่ระบุในมาตรฐาน IEC 60456 / EN 60456
3. การใช้งานในแต่ละบ้านอาจต่างจากค่าที่ระบุในตาราง เนื่องจากแรงดันและอุณหภูมิของน้ำ ปริมาณผ้า และประเภทของผ้า
4. เมื่อมีการเลือกฟังก์ชัน Intensive Wash (ซักมากเป็นพิเศษ) เวลาของรอบจะเพิ่มขึ้นสำหรับแต่ละรอบ

WF8800RS-02591S_TH.indd 31 9/18/2008 8:34:31 PM

ภาคผนวก

ผังการดูแลผ้า

สัญลักษณ์ต่อไปนี้เป็นคำแนะนำในการดูแลผ้า ฉลากการดูแลผ้าประกอบด้วยสัญลักษณ์สี่อย่างตามลำดับ: การซัก การฟอกขาว การอบแห้ง และการรีด ตลอดจนการซักแห้ง ถ้าจำเป็น

การใช้สัญลักษณ์ช่วยให้มีความสม่ำเสมอระหว่างผู้ผลิตเสื้อผ้าแต่ละรายทั้งสำหรับผ้าในประเทศและผ้าที่นำเข้า โปรดปฏิบัติตามฉลากการดูแลเพื่อยืดอายุการใช้งานของผ้าและลดปัญหาในการซัก

	ผ้าหนา		สามารถรีดที่ความร้อนสูงสุด 100 °C
	ผ้าบาง		ห้ามรีด
	ซักได้ที่ความร้อน 95 °C		ซักแห้งด้วยสารทำละลายใดก็ได้
	ซักได้ที่ 60 °C		ซักแห้งด้วยเปอร์คลอไรด์ น้ำมันไฟแช็ก แอลกอฮอล์ หรือ R113 เท่านั้น
	ซักได้ที่ความร้อน 40 °C		ซักแห้งด้วยน้ำมันก๊าด แอลกอฮอล์ หรือ R113 เท่านั้น
	ซักได้ที่ความร้อน 30 °C		ห้ามซักแห้ง
	ซักด้วยมือ		ห้ามแขวน
	ซักแห้งเท่านั้น		แขวนได้
	ใช้สารฟอกในน้ำเย็น		ตากด้วยไม้แขวนเสื้อ
	ห้ามใช้สารฟอก		ใช้เครื่องอบ ความร้อนปกติ
	สามารถรีดที่ความร้อนสูงสุด 200 °C		ใช้เครื่องอบ ความร้อนต่ำ
	สามารถรีดที่ความร้อนสูงสุด 150 °C		ห้ามใช้เครื่องอบ

การปกป้องสิ่งแวดล้อม

- อุปกรณ์นี้ได้รับการผลิตจากวัสดุรีไซเคิล หากคุณต้องการทิ้งอุปกรณ์นี้ โปรดปฏิบัติตามระเบียบการทิ้งขยะของพื้นที่ ตัดสายไฟ เพื่อป้องกันไม่ให้มีการต่อสายไฟกับเครื่องใช้ไฟฟ้านี้อีก ถอดประตูออก เพื่อป้องกันไม่ให้สัตว์หรือเด็กติดอยู่ภายใน
- อย่าใช้ผงซักฟอกเกินปริมาณที่แนะนำโดยผู้ผลิตผงซักฟอก
- ใช้สารขจัดคราบและสารฟอกขาวก่อนการซักเฉพาะเมื่อจำเป็นเท่านั้น
- ประหยัดน้ำและไฟฟ้าโดยซักเต็มถัง (ปริมาณผ้าขึ้นอยู่กับโปรแกรมที่ใช้)

ประกาศเกี่ยวกับมาตรฐาน

อุปกรณ์นี้เป็นไปตามมาตรฐานความปลอดภัยของยุโรป EC directive 93/68 และ EN Standard 60335

WF8800RS-02591S_TH.indd 32 9/18/2008 8:34:33 PM

ข้อมูลจำเพาะ

ประเภท			เครื่องซักผ้าแบบ ฝาหน้า					
ขนาด			WF8804ES/WF8804RS/WF8804JS WF8802ES/WF8802RS/WF8802JS WF8800ES/WF8800RS/WF8800JS			WF8704ES/WF8704RS/WF8704JS WF8702ES/WF8702RS/WF8702JS WF8700ES/WF8700RS/WF8700JS		
			ก 598 มม. X ล 600 มม. X ส 844 มม.			ก 598 มม. X ล 600 มม. X ส 844 มม.		
แรงดันน้ำ			50 kPa ~ 800 kPa					
ปริมาณน้ำ			64 ลิตร			56 ลิตร		
น้ำหนักสุทธิ			WF8804ES/ WF8804RS/ WF8804JS	WF8802ES/ WF8802RS/ WF8802JS	WF8800ES/ WF8800RS/ WF8800JS	WF8704ES/ WF8704RS/ WF8704JS	WF8702ES/ WF8702RS/ WF8702JS	WF8700ES/ WF8700RS/ WF8700JS
			74 กิโลกรัม	73 กิโลกรัม	72 กิโลกรัม	65 กิโลกรัม	64 กิโลกรัม	63 กิโลกรัม
ความจุในการซักและการปั่นหมาด			8.0 กิโลกรัม			7.0 กิโลกรัม		
การใช้พลังงานไฟฟ้า	รุ่น		WF8804ES/WF8804RS/WF8804JS WF8802ES/WF8802RS/WF8802JS WF8800ES/WF8800RS/WF8800JS			WF8704ES/WF8704RS/WF8704JS WF8702ES/WF8702RS/WF8702JS WF8700ES/WF8700RS/WF8700JS		
	ขณะซัก		220 โวลต์	150 วัตต์		220 โวลต์	150 วัตต์	
			240 โวลต์	150 วัตต์		240 โวลต์	150 วัตต์	
	ซักและอบร้อน		220 โวลต์	2200 วัตต์		220 โวลต์	2200 วัตต์	
			240 โวลต์	2400 วัตต์		240 โวลต์	2400 วัตต์	
	ปั่นหมาด	รุ่น	WF8804ES/ WF8804RS/ WF8804JS	WF8802ES/ WF8802RS/ WF8802JS	WF8800ES/ WF8800RS/ WF8800JS	WF8704ES/ WF8704RS/ WF8704JS	WF8702ES/ WF8702RS/ WF8702JS	WF8700ES/ WF8700RS/ WF8700JS
		230 โวลต์	600 วัตต์	550 วัตต์	500 วัตต์	600 วัตต์	550 วัตต์	500 วัตต์
	การสูบน้ำ		34 วัตต์					
น้ำหนัก บรรจุภัณฑ์	รุ่น		WF8804ES/WF8804RS/WF8804JS WF8802ES/WF8802RS/WF8802JS WF8800ES/WF8800RS/WF8800JS			WF8704ES/WF8704RS/WF8704JS WF8702ES/WF8702RS/WF8702JS WF8700ES/WF8700RS/WF8700JS		
	กระดาษ		2.5 กิโลกรัม			2.5 กิโลกรัม		
	พลาสติก		1.0 กิโลกรัม			1.5 กิโลกรัม		
การหมุนปั่นหมาด	รุ่น		WF8804ES/WF8704ES WF8804RS/WF8704RS WF8804JS/WF8704JS		WF8802ES/WF8702ES WF8802RS/WF8702RS WF8802JS/WF8702JS		WF8800ES/WF8700ES WF8800RS/WF8700RS WF8800JS/WF8700JS	
	รอบต่อนาที		1400		1200		1000	

ลักษณะและข้อมูลจำเพาะของผลิตภัณฑ์อาจมีการเปลี่ยนแปลงโดยไม่ได้แจ้งให้ทราบล่วงหน้า

WF8800RS-02591S_TH.indd 33 9/18/2008 8:34:33 PM

บันทึก

บันทึก

ถ้าคุณมีคำถามหรือข้อคิดเห็น

ประเทศ	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
THAILAND	1800-29-3232 02-689-3232	www.samsung.com/th

รหัส DC68-02591S_TH